






1. Remove the cover from the heat exchanger section. (remove bolts)

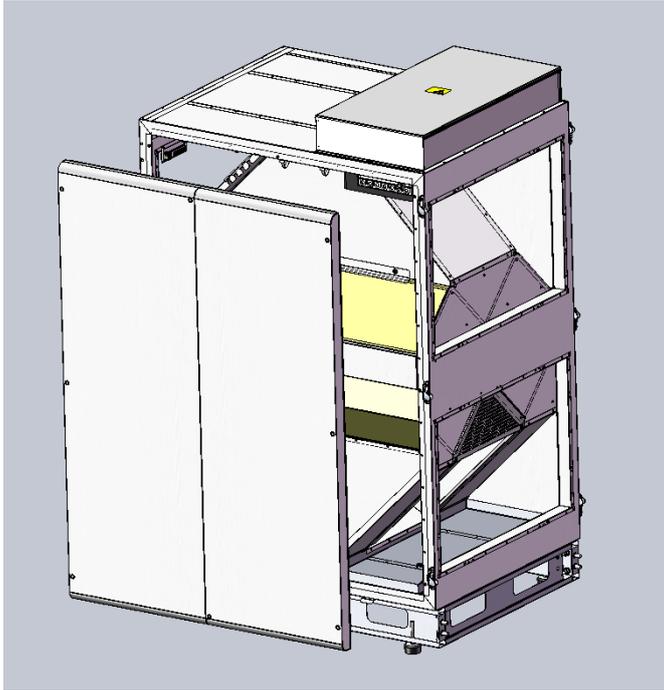


2. The individual product sections are lined up next to each other. At one level.

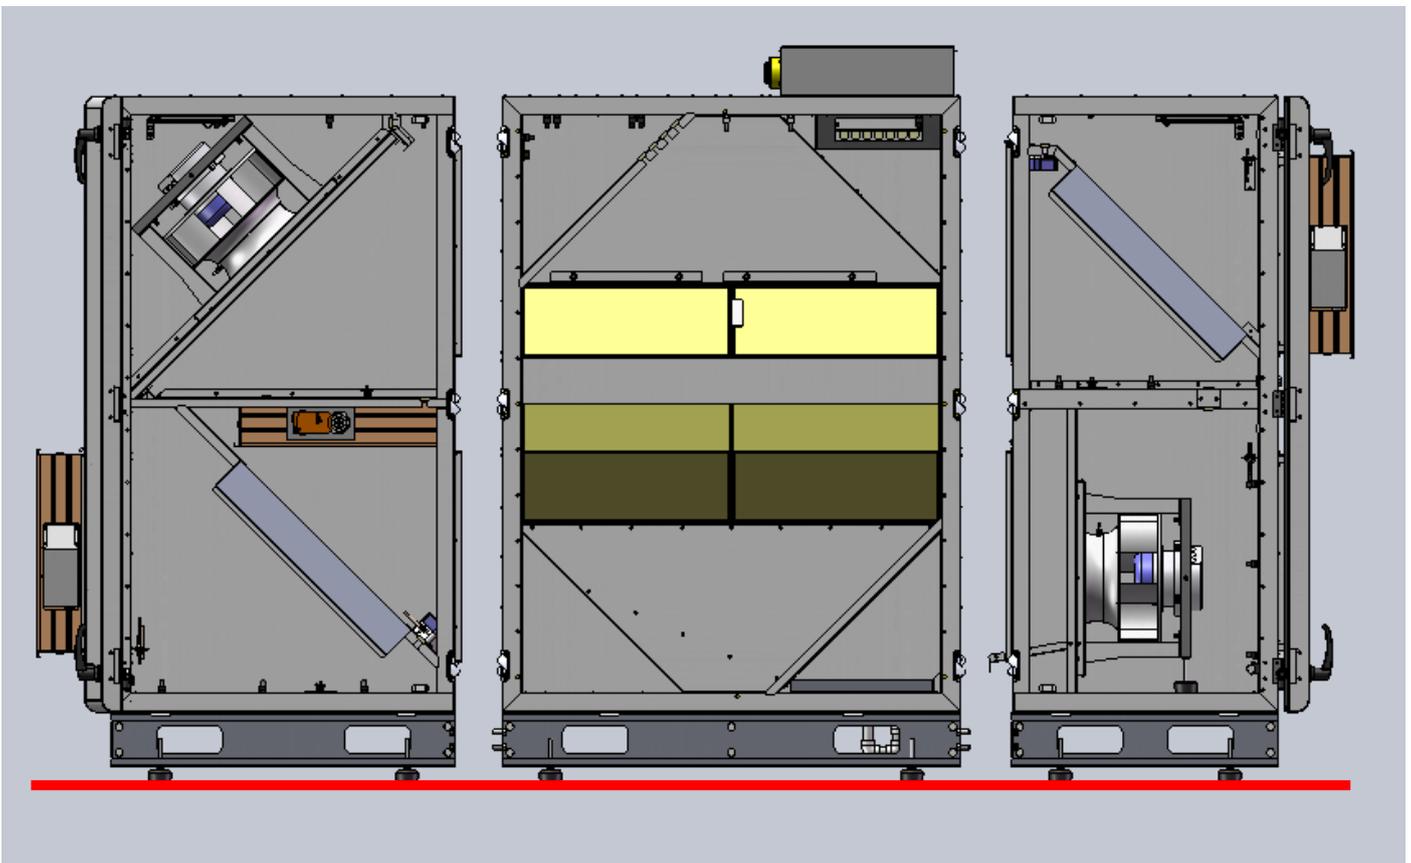




3. The sections are pushed together side by side, and connected with bolts.

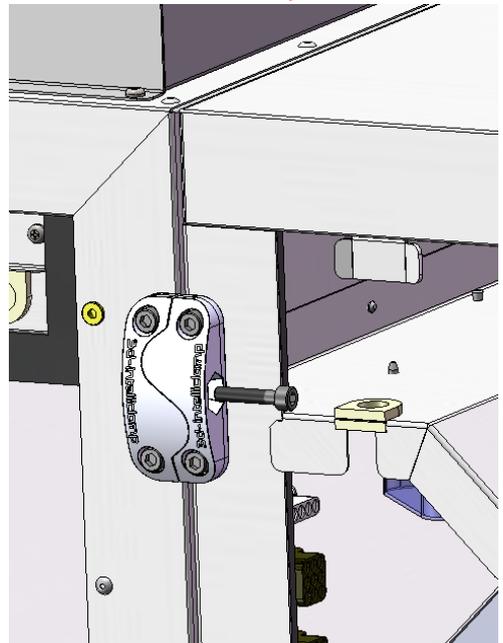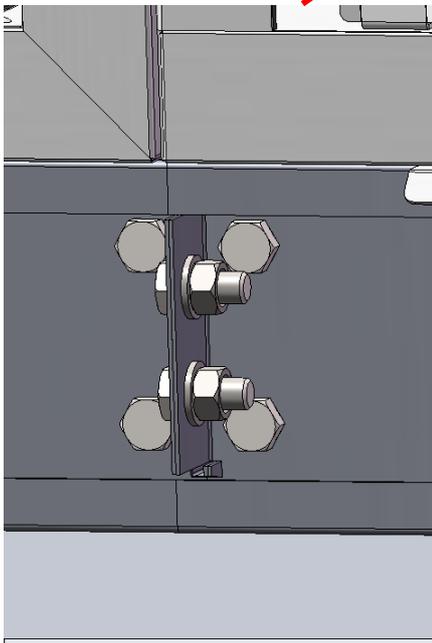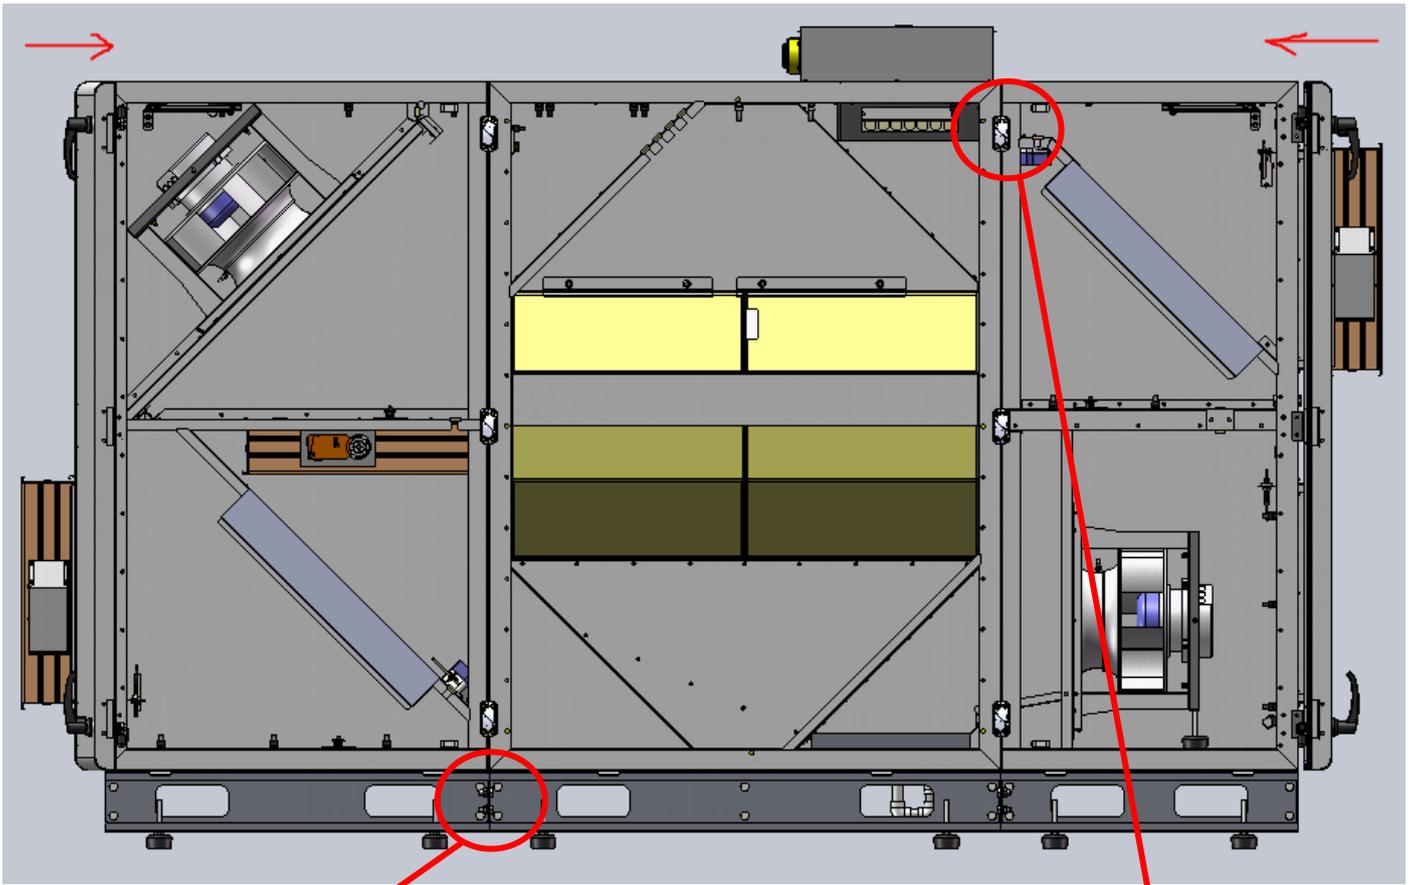


4. Screw condensate drain detail. The blue marked places grease with sealant.

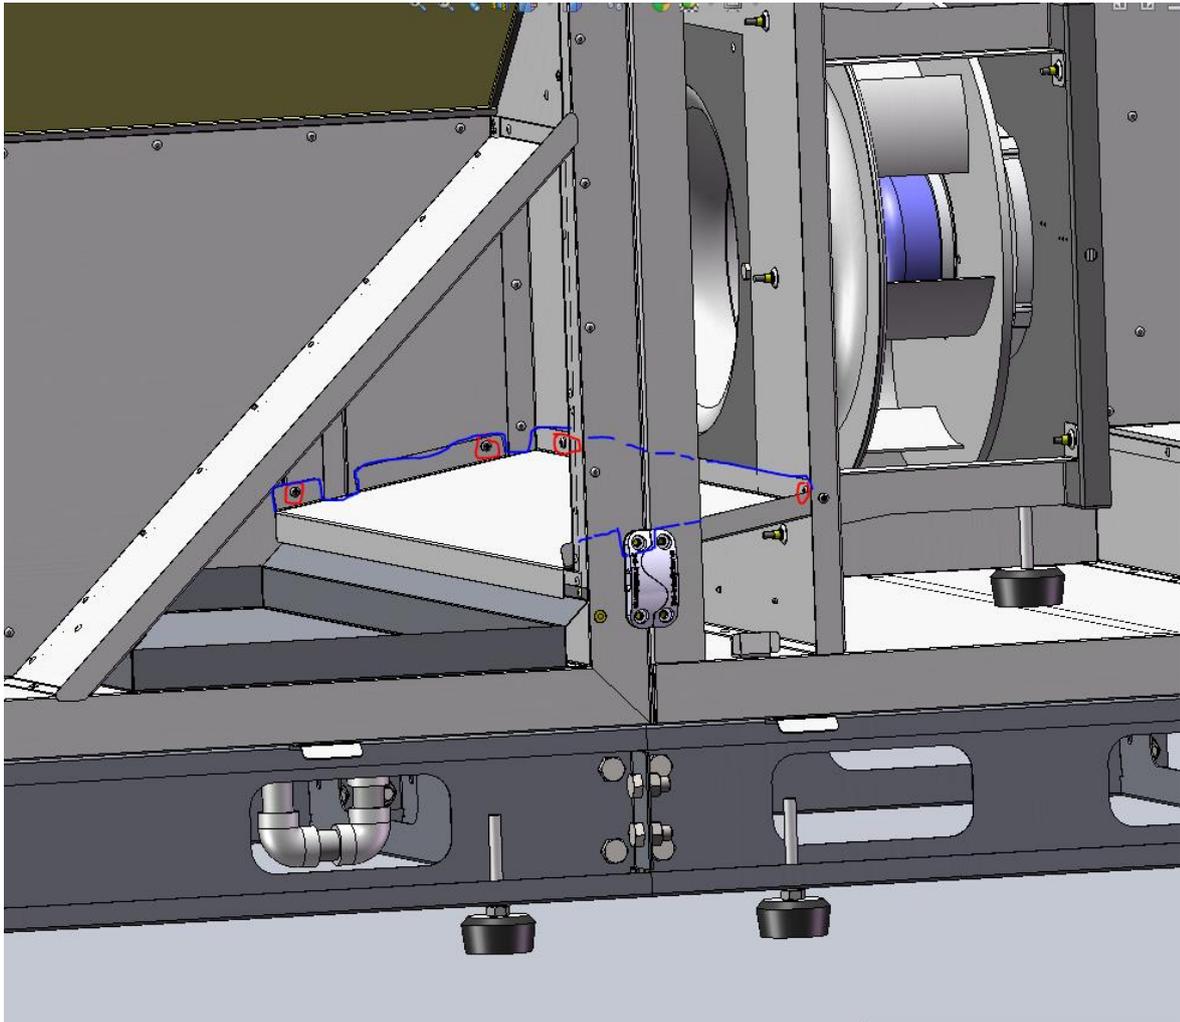


5. Connect unit sections electrically. Connect cable connectors. According to the markings

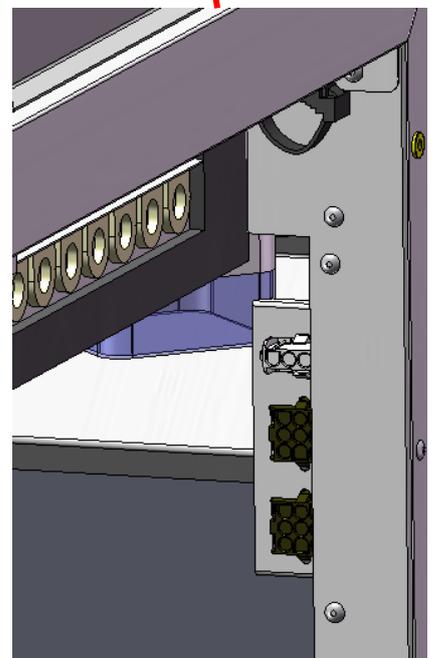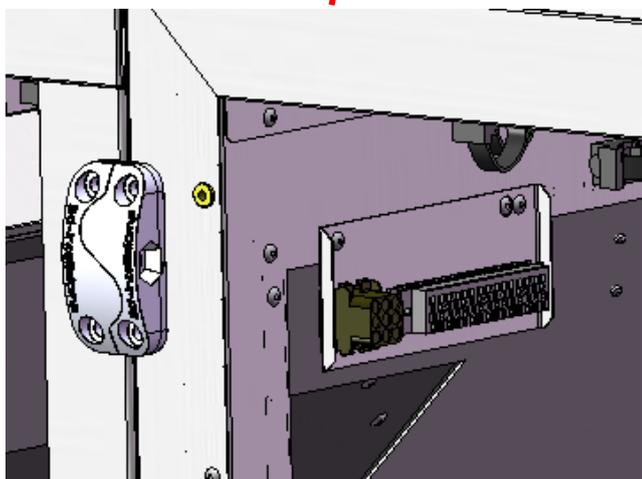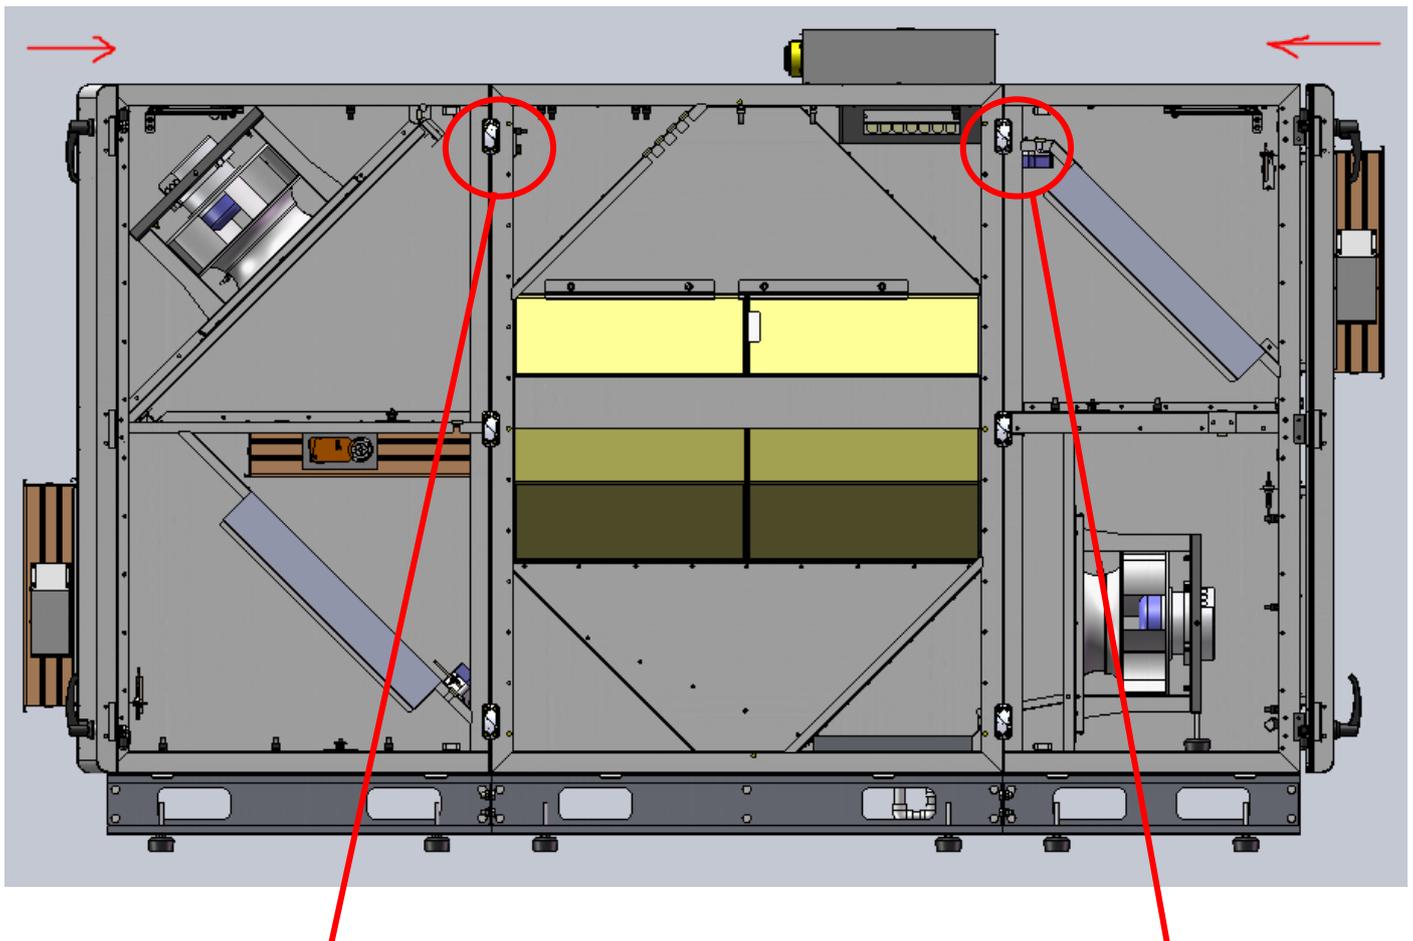

6. Put back cover and close doors

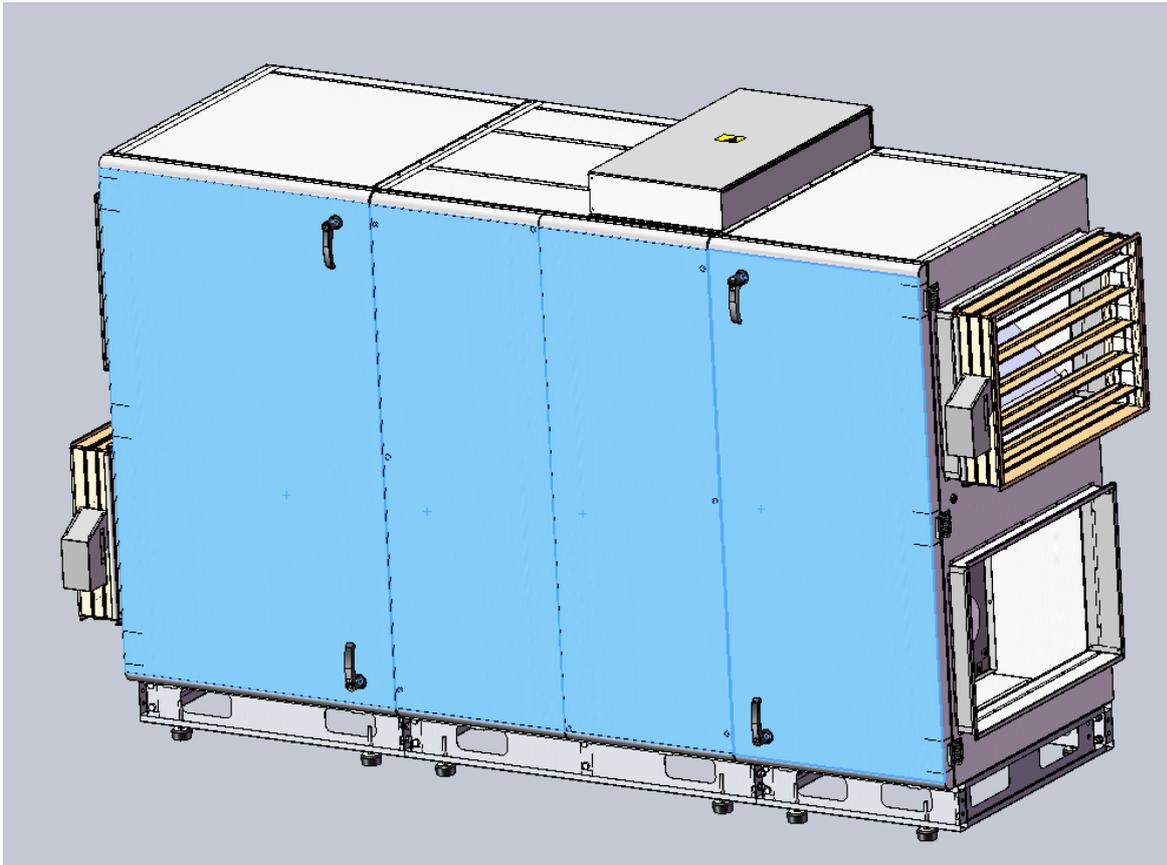

1. The individual product sections are lined up next to each other. At one level.
2. Connect unit sections electrically. Connect cable connectors. According to the markings

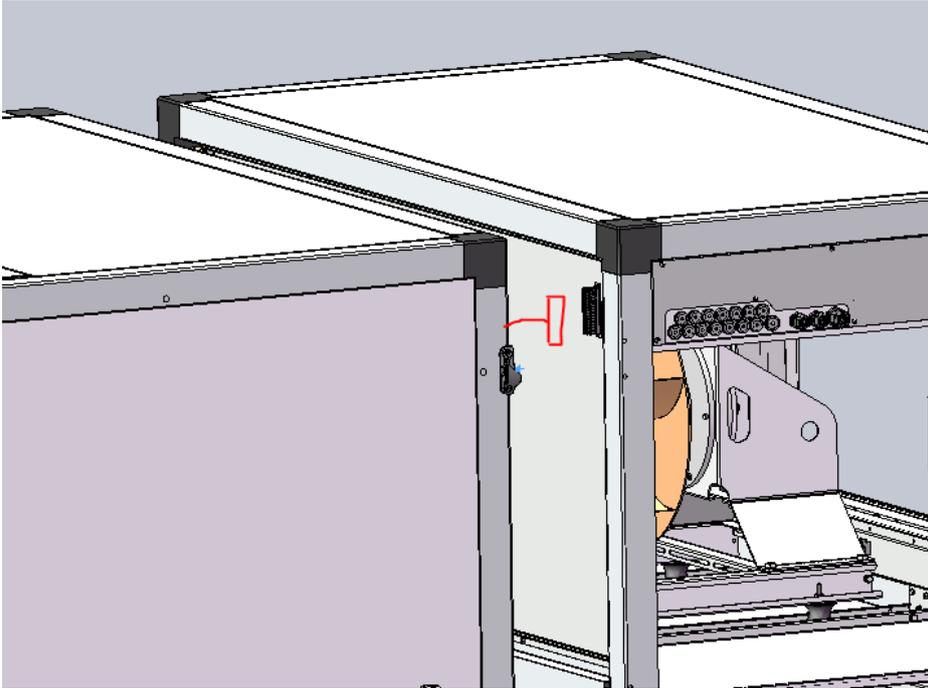

3. The sections are pushed together side by side, and connected with bolts

