


Optigo OP5U wall manual / Optigo OP5U väggmanual


For complete information about OP5U, see the manual *Optigo OP5U Manual*, which can be downloaded from www.regin.se.

För fullständig information om OP5U, se manualen *Optigo OP5U Manual*, som kan laddas ner från www.regin.se.

Change setpoint / Ändra börvärde

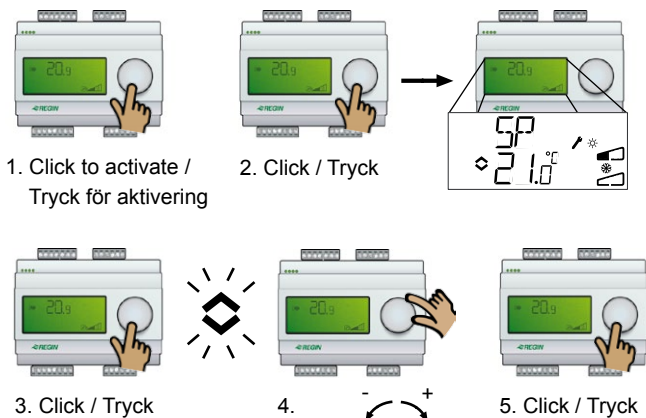


Control modes / Reglerfall

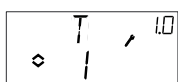


Temperature control /
Temperaturreglering




CO₂-control /
CO₂-reglering

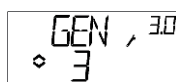

General control /
Generell reglering

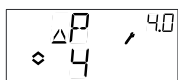


Pressure control /
Tryckreglering

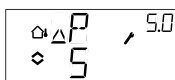

Pressure control with outdoor compensation /
Tryckreglering med utekompensering

Display symbols / Displaysymboler

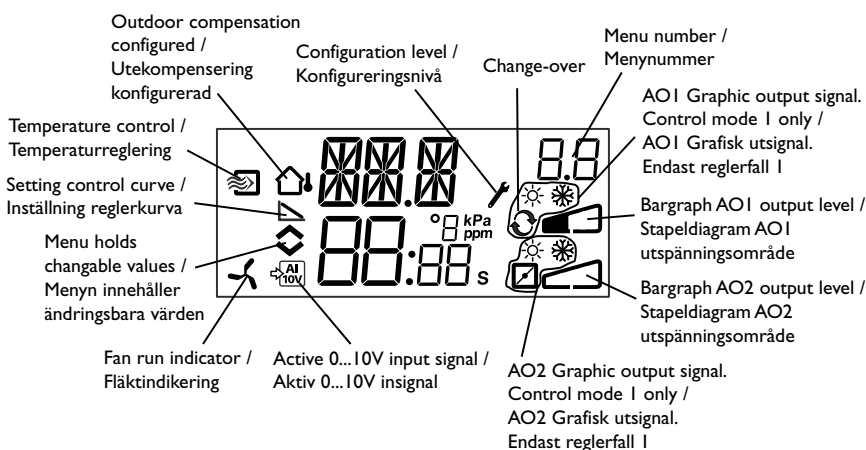

Technical support / Teknisk support