



RIRS 1200-5500 H EKO 3.0

EN MOUNTING AND INSTALLATION INSTRUCTION



1. CONTENT

2.SYMBOLS AND MARKING	3
3.SAFETY INSTRUCTIONS AND PRECAUTIONS	4
4.INFORMATION ABOUT THE PRODUCT	5
4.1. DESCRIPTION	5
4.2. DIMENSIONS AND WEIGHT	5
4.3. TECHNICAL DATA	8
4.4. OPERATING CONDITIONS	9
4.5. STANDARD PACKAGE OF COMPONENTS	9
4.6. DESCRIPTION OF COMPONENTS	10
5. INSTALATION	11
5.1. RECEPTION OF GOODS	11
5.2. TRANSPORTATION AND STORAGE	11
5.3. UNPACKING	12
5.4.PIPING AND INSTRUMENTATION DIAGRAM	12
5.5. MOUNTING	13
5.5.1. UNIT PLACING AND MOUNTING POSITIONING REQUIREMENTS	14
5.5.2. FLOOR MOUNTING	14
5.6. CONNECTION OF THE AIR DUCT	14
5.7.CONNECTION OF THE UNIT TO ELECTRIC NETWORK	15
5.8. START-UP RECOMMENDATIONS	15
5.8.1. SYSTEM PROTECTION	15
5.8.2.PRE-STARTUP RECOMENDATIONS OF THE UNIT (IN THE PRESENCE OF THE ENDUSER)	15
6. MAINTENANCE	16
6.1. SAFETY INSTRUCTION	16
6.2.GENERAL RECOMMENDATIONS FOR VENTILATION SYSTEM MAINTENANCE	16
6.3. COVER OPENING	16
6.4. FILTERS MAINTENANCE	17
6.5. ROTOR MAINTENANCE	17
6.6. FANS MAINTENANCE	18
6.7. HEATER MAINTENANCE	18
6.8. CONTROL BOARD MAINTENANCE	18
7. CONTROL	20
7.1. DEVICE CONTROL	20
7.2. DEVICE FUNCTIONS	20
8. ACCESSORIES	21
8.1. CONNECTION OF ACCESSORIES	25
8.1.1.FIRE PROTECTION SIGNAL INPUT (FIRE PROTECTION INPUT (NC))	25
8.1.2.EXTERNAL CO2 /PRESSURE SENSORS	25
8.1.3.ROOM CO2 TRANSMITTER INSTALLATION RECOMMENDATION	26
8.1.4.CO2 CONCENTRATION ACCORDING TO PETTENKOFER LIMIT	26
8.1.5.CONNECTION OF SUPPLY AND EXTRACT AIR DAMPERS	27
8.1.6.CONNECTION OF REMOTE CONTROL PANEL OR MODBUS	27
8.1.7.WATER HEATER CIRCULATION PUMP AND VALVE ACTUATOR	27
8.1.8.RECOMMENDED SCHEME FOR CONNECTION OF INTERNAL AND EXTERNAL COMPONENTS	29
9.POSSIBLE FAULTS AND TROUBLESHOOTING	38
10.ECODESIGN DATA TABLE	39
11.DECLARATION OF CONFIMITY	41
12. WARRANTY	42
12.1. LIMITED WARRANTY COUPON	42

2. SYMBOLS AND MARKING



Warning – pay attention



Additional information

Apply the auxiliary label on the unit (on an easily accessible location) or on the dashed location of the technical manual in order to keep the important information about the unit.

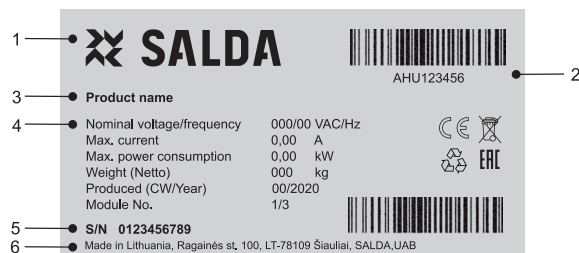


Figure 2.1. Technical label

1 - Logo; 2 - Product code (SKU); 3 - Product name; 4 - Technical data; 5 - Serial number; 6 - Production place.



Figure 2.2. Indication for duct connection.

ODA - outdoor air; SUP - supply air; ETA - extract air; EHA - exhaust air.

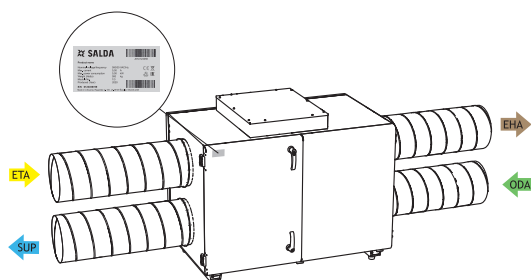


Figure 2.3. Technical label place and air duct indication RIRS 1200-1900 H EKO 3.0 (left side)

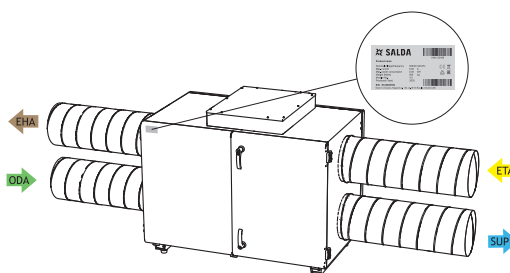


Figure 2.4. Technical label place and air duct indication RIRS 1200-1900 H EKO 3.0 (right side)

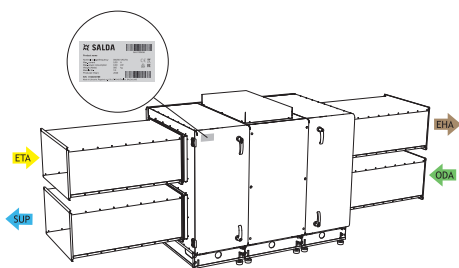


Figure 2.5. Technical label place and air duct indication RIRS 2500-3500 H EKO 3.0 (left side)

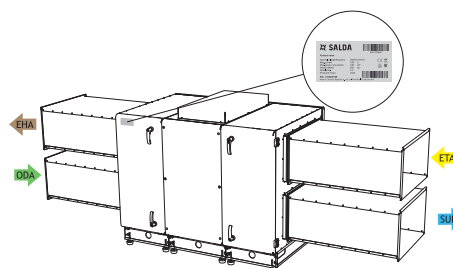


Figure 2.6. Technical label place and air duct indication RIRS 2500-3500 H EKO 3.0 (right side)

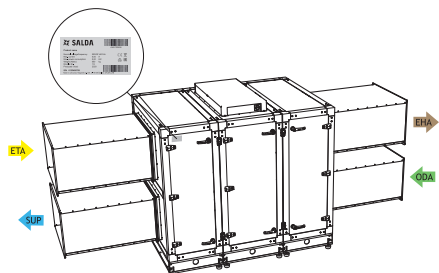


Figure 2.7. Technical label place and air duct indication RIRS 5500 H EKO 3.0 (left side)

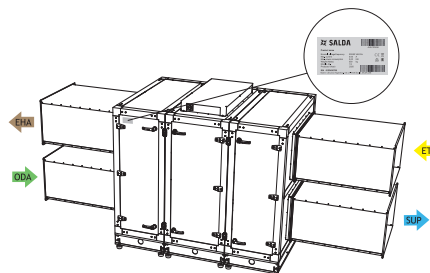


Figure 2.8. Technical label place and air duct indication RIRS 5500 H EKO 3.0 (right side)



NOTE. Ducts are not the part of the unit.

3. SAFETY INSTRUCTIONS AND PRECAUTIONS

Read these instructions very carefully before installing and using this equipment. Installation, connection and maintenance should be carried out by a qualified technician and in accordance with the local regulations and legislation.

The company shall take no responsibility for the injuries or damaged property if the safety requirements are not followed or the device is modified without the permission of the manufacturer.

Main safety rules

Danger



- Before carrying out any electrical or maintenance works, make sure that the device is disconnected from the mains and all moving parts of the device have stopped.
 - Make sure that the fans are not accessible through air ducts or branch openings.
 - If any liquids on electric parts or connections that bear voltage are noticed, stop the operation of the device.
 - Do not plug the device into the mains that differ from the one indicated on the label or on the housing.
 - Voltage of the mains should comply with the electro technical parameters indicated on the label.
 - The device should be earthed in accordance with the regulations on the installation of electric devices. Turning on and using unearthed device is not allowed. Follow the requirements specified on the device's labels that indicate danger.
-

Warnings



- Connection of electricity and maintenance of the device should be performed by the qualified personnel only and in accordance with the manufacturer's instructions and safety requirements.
 - In order to reduce the risk during installation and maintenance, suitable protective clothing must be worn.
 - Beware of sharp angles while carrying out installation and maintenance works.
 - Do not touch heating elements until they haven't cooled down.
 - Some devices are heavy, you should be very careful while transporting and installing them. Use suitable lifting equipment.
 - When connecting electricity to the mains, a circuit breaker of suitable size must be used.
-

Warning!



- If the device is installed in a cold environment, make sure that all connections and tubes are properly isolated. Intake and discharge air ducts should be isolated in all cases.
 - Openings of the ducts should be covered during transportation and installation.
 - Make sure not to damage the heater when connecting the piping of the water heater. For tightening up, use a wrench/spanner.
-

Before starting up the device



- make sure, that there are no strange objects inside;
 - manually check fans to make sure they are not stuck or blocked;
 - if rotary heat exchanger is installed in the device, make sure that it is not stuck or blocked;
 - check the earthing;
 - make sure that all components and accessories are connected in accordance with the wiring diagram or provided instructions.
-

4. INFORMATION ABOUT THE PRODUCT

4.1. DESCRIPTION

RIRS H EKO 3.0 is a non-residential air handling unit with a high efficiency (up to 73 %) rotor heat exchanger. The unit supplies ventilation in home and takes the heat from exhaust air. AHU complies with ErP 2018 requirements. The unit is operated by a separate remote control panel or through separate MB-Gateway by PC. Remote control panel and MB-Gateway are optional and not included in standard package.

 **Not suitable for operation in pools, saunas and other similar premises.**

4.2. DIMENSIONS AND WEIGHT

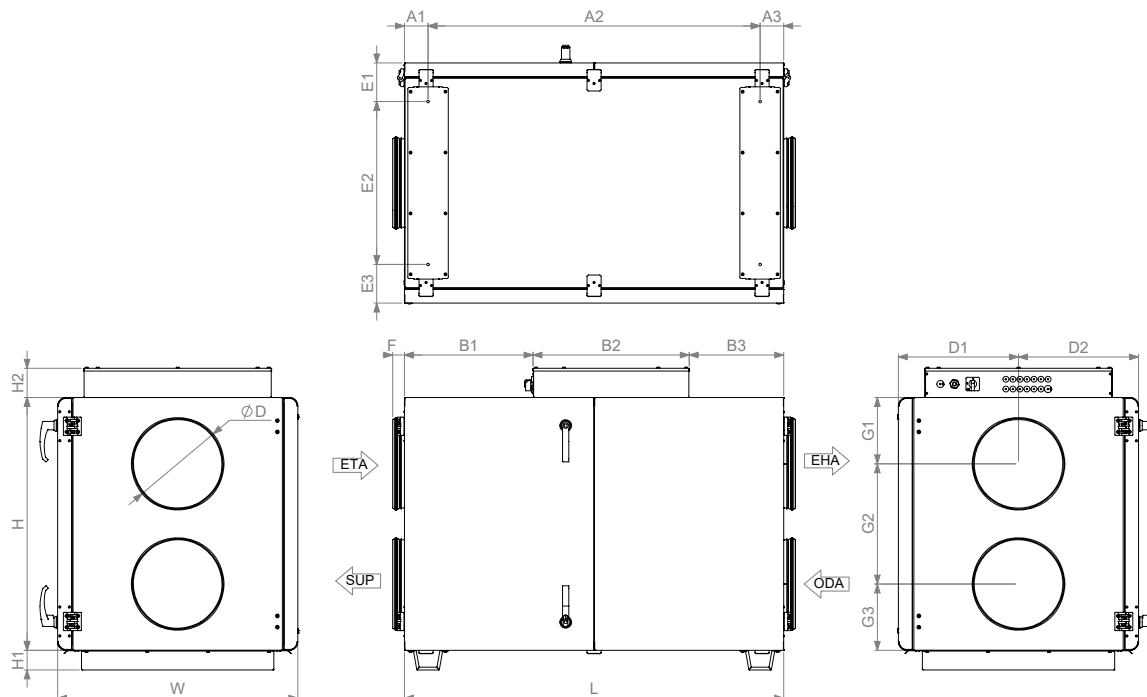


Figure 4.2.1. RIRS 1200-1900 H EKO 3.0

RIRS EKO 3.0		1200 HEL	1200 HER	1200 HWL	1200 HWR	1900 HEL	1900 HER	1900 HWL	1900 HWR
L	[mm]	1350	1350	1350	1350	1350	1350	1350	1350
W	[mm]	855	855	855	855	855	855	855	855
H	[mm]	900	900	900	900	900	900	900	900
D	[mm]	315	315	315	315	315	315	315	315
H1	[mm]	70	70	70	70	70	70	70	70
H2	[mm]	105	105	105	105	105	105	105	105
F	[mm]	41	41	41	41	41	41	41	41
A1	[mm]	84	84	84	84	84	84	84	84
A2	[mm]	1182	1182	1182	1182	1182	1182	1182	1182
A3	[mm]	84	84	84	84	84	84	84	84
E1	[mm]	138	138	138	138	138	138	138	138
E2	[mm]	580	580	580	580	580	580	580	580
E3	[mm]	138	138	138	138	138	138	138	138
B1	[mm]	459	338	459	338	459	338	459	338
B2	[mm]	553	553	553	553	553	553	553	553
B3	[mm]	338	459	338	459	338	459	338	459
D1	[mm]	428	428	428	428	428	428	428	428
D2	[mm]	428	428	428	428	428	428	428	428
G1	[mm]	236	236	236	236	236	236	236	236
G2	[mm]	428	428	428	428	428	428	428	428
G3	[mm]	236	236	236	236	236	236	236	236
WEIGHT	[kg]	187	187	185	185	190	190	188	188

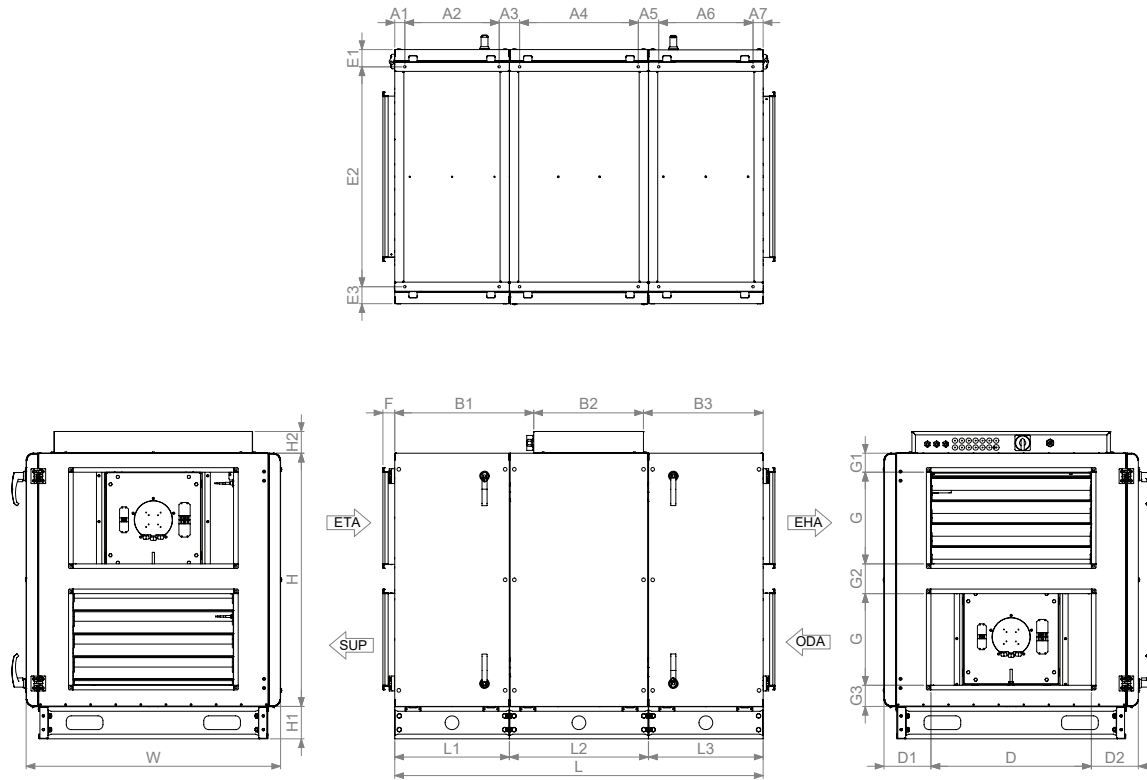


Figure 4.2.2. RIRS 2500-3500 H EKO 3.0

RIRS EKO 3.0		2500 HEL	2500 HER	2500 HWL	2500 HWR	3500 HEL	3500 HER	3500 HWL	3500 HWR
L	[mm]	1608	1608	1608	1608	1900	1900	1900	1900
W	[mm]	1110	1110	1110	1110	1205	1205	1205	1205
H	[mm]	1105	1105	1105	1105	1300	1300	1300	1300
D	[mm]	700	700	700	700	700	700	700	700
G	[mm]	400	400	400	400	400	400	400	400
L1	[mm]	500	500	500	500	630	630	630	630
L2	[mm]	606	606	606	606	630	630	630	630
L3	[mm]	500	500	500	500	630	630	630	630
H1	[mm]	141	141	141	141	141	141	141	141
H2	[mm]	95	95	95	95	132	132	132	132
F	[mm]	51	51	51	51	51	51	51	51
A1	[mm]	44	44	44	44	48	48	48	48
A2	[mm]	412	412	412	412	536	536	536	536
A3	[mm]	89	89	89	89	89	89	89	89
A4	[mm]	518	518	518	518	556	556	556	556
A5	[mm]	89	89	89	89	89	89	89	89
A6	[mm]	412	412	412	412	536	536	536	536
A7	[mm]	44	44	44	44	48	48	48	48
E1	[mm]	75	75	75	75	102	102	102	102
E2	[mm]	960	960	960	960	1000	1000	1000	1000
E3	[mm]	75	75	75	75	102	102	102	102
B1	[mm]	608	522	608	522	670	686	670	686
B2	[mm]	477	477	477	477	545	545	545	545
B3	[mm]	522	608	522	608	686	670	686	670
D1	[mm]	204	204	204	204	250	250	250	250
D2	[mm]	204	204	204	204	250	250	250	250
G1	[mm]	82	82	82	82	145	145	145	145
G2	[mm]	128	128	128	128	205	205	205	205
G3	[mm]	91	91	91	91	142	142	142	142
WEIGHT	[kg]	390	390	385	385	432	432	427	427

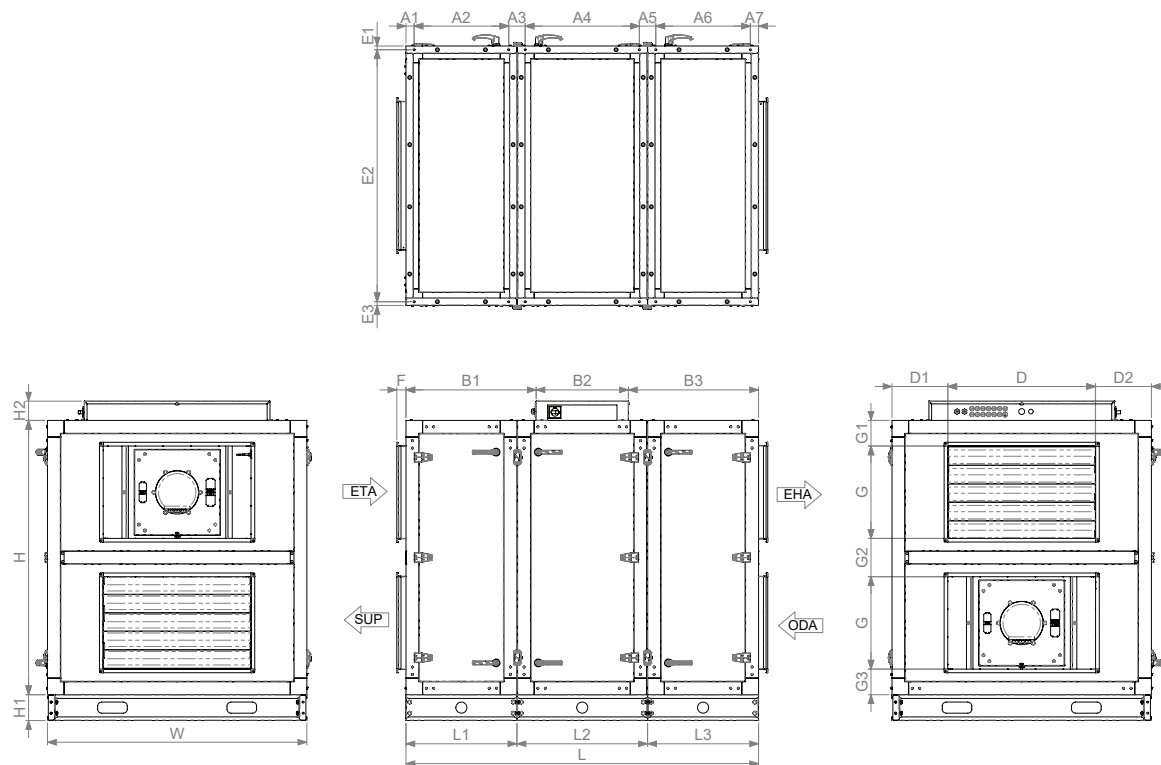


Figure 4.2.3. RIRS 5500 H EKO 3.0

RIRS EKO 3.0		5500 HEL	5500 HER	5500 HWL	5500 HWR
L	[mm]	1910	1910	1910	1910
W	[mm]	1405	1405	1405	1405
H	[mm]	1485	1485	1485	1485
D	[mm]	800	800	800	800
G	[mm]	500	500	500	500
L1	[mm]	600	600	600	600
L2	[mm]	700	700	700	700
L3	[mm]	600	600	600	600
H1	[mm]	140	140	140	140
H2	[mm]	105	105	105	105
F	[mm]	50	50	50	50
A1	[mm]	44	44	44	44
A2	[mm]	512	512	512	512
A3	[mm]	89	89	89	89
A4	[mm]	618	618	618	618
A5	[mm]	89	89	89	89
A6	[mm]	512	512	512	512
A7	[mm]	44	44	44	44
E1	[mm]	20	20	20	20
E2	[mm]	1364	1364	1364	1364
E3	[mm]	20	20	20	20
B1	[mm]	704	704	704	704
B2	[mm]	500	500	500	500
B3	[mm]	704	704	704	704
D1	[mm]	300	300	300	300
D2	[mm]	300	300	300	300
G1	[mm]	138	138	138	138
G2	[mm]	205	205	205	205
G3	[mm]	138	138	138	138
WEIGHT	[kg]	627	627	620	620

4.3. TECHNICAL DATA

RIRS EKO 3.0		1200 HE	1200 HW	1900 HE	1900 HW
Exhaust air fan					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,38/2,5	0,38/2,5	0,47/2,04	0,47/2,04
speed	[min ⁻¹]	3370	3370	2530	2530
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
Supply air fan					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,38/2,5	0,38/2,5	0,47/2,04	0,47/2,04
speed	[min ⁻¹]	3370	3370	2530	2530
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
Integrated electrical heater	[kW]	4	-	9	-
Total power/current consumption	[kW/A]	4,76/15	0,76/5	9,94/17,18	0,94/4,08
Automatic control integrated		PRV	PRV	PRV	PRV
Insulation of walls	[mm]	50	50	50	50
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 745x350x46 ePM10-55	MPL 745x350x46 ePM10-55	MPL 745x350x46 ePM10-55	MPL 745x350x46 ePM10-55
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 745x350x46 ePM1-70	MPL 745x350x46 ePM1-70	MPL 745x350x46 ePM1-70	MPL 745x350x46 ePM1-70
Device protection class		IP34	IP34	IP34	IP34
RIRS EKO 3.0					
		2500 HE	2500 HW	3500 HE	3500 HW
Exhaust air fan					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,715/3,1	0,715/3,1	1,3/5,65	1,3/5,65
speed	[min ⁻¹]	2800	2800	2390	2390
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
Supply air fan					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,715/3,1	0,715/3,1	1,3/5,65	1,3/5,65
speed	[min ⁻¹]	2800	2800	2390	2390
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
Integrated electrical heater	[kW]	9	-	12	-
Total power/current consumption	[kW/A]	10,43/19,2	1,43/6,2	14,6/28,64	2,6/11,3
Automatic control integrated		PRV	PRV	PRV	PRV
Insulation of walls	[mm]	50	50	50	50
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 1000x444x90 ePM10-55	MPL 1000x444x90 ePM10-55	MPL 552x542x46 ePM10-55	MPL 552x542x46 ePM10-55
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 1000x444x90 ePM1-70	MPL 1000x444x90 ePM1-70	MPL 552x542x46 ePM1-70	MPL 552x542x46 ePM1-70
Device protection class		IP34	IP34	IP34	IP34

RIRS EKO 3.0		5500 HE	5500 HW
Exhaust air fan			
phase/voltage	[50 Hz/VAC]	3/400	3/400
power/current	[kW/A]	1,85/2,9	1,85/2,9
speed	[min ⁻¹]	2180	2180
control input	[VDC]	0-10	0-10
protection class		IP54	IP54
Supply air fan			
phase/voltage	[50 Hz/VAC]	3/400	3/400
power/current	[kW/A]	1,85/2,9	1,85/2,9
speed	[min ⁻¹]	2180	2180
control input	[VDC]	0-10	0-10
protection class		IP54	IP54
Integrated electrical heater	[kW]	15	-
Total power/current consumption	[kW/A]	18,7/27,5	3,7/5,8
Automatic control integrated		PRV	PRV
Insulation of walls	[mm]	50	50
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 647x615x90 ePM10-55	MPL 647x615x90 ePM10-55
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 647x615x90 ePM1-70	MPL 647x615x90 ePM1-70
Device protection class		IP34	IP34

Acoustic data: check the product page on www.salda.it



Not suitable for installation in living rooms: additional noise insulation required.

4.4. OPERATING CONDITIONS

RIRS EKO 3.0	1200 HE/HW	1900 HE/HW	2500 HE/HW	3500 HE/HW	5500 HE/HW
Minimum outdoor air temperature	-23 °C	-23 °C	-23 °C	-23 °C	-23 °C
Maximum outdoor air temperature	+40 °C	+40 °C	+40 °C	+40 °C	+40 °C
Minimum extracted air temperature	+15 °C	+15 °C	+15 °C	+15 °C	+15 °C
Maximum extracted air temperature	+40 °C	+40 °C	+40 °C	+40 °C	+40 °C
Maximum extracted air relative humidity	60 %	60 %	60 %	60 %	60 %
Minimum ambient air temperature	+5 °C	+5 °C	+5 °C	+5 °C	+5 °C
Maximum ambient air temperature	+40 °C	+40 °C	+40 °C	+40 °C	+40 °C
Installation	indoor/outdoor	indoor/outdoor	indoor/outdoor	indoor/outdoor	indoor/outdoor

4.5. STANDARD PACKAGE OF COMPONENTS

RIRS EKO 3.0	1200 HE	1200 HW	1900 HE	1900 HW	2500 HE	2500 HW	3500 HE	3500 HW	5500 HE	5500 HW
Handle with lock 265076-10	1	1	1	1	2	2	2	2	3	3
Handle 265076-00	1	1	1	1	2	2	2	2	3	3
Anti vibration mounts S-00 SV-00	-	-	-	-	12	12	12	12	12	12

4.6. DESCRIPTION OF COMPONENTS

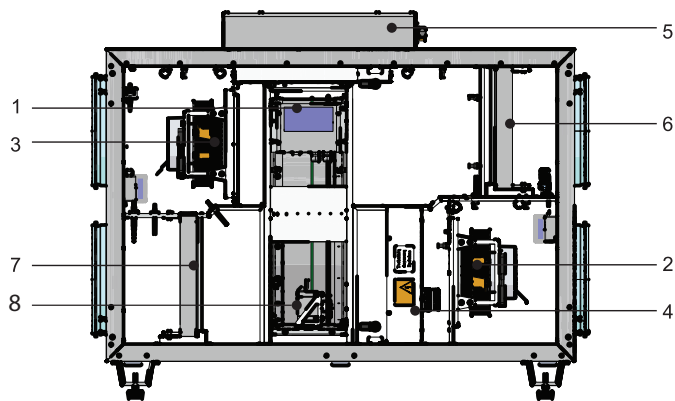


Figure 4.6.1. RIRS 1200-1900 HE EKO 3.0 construction (right side)

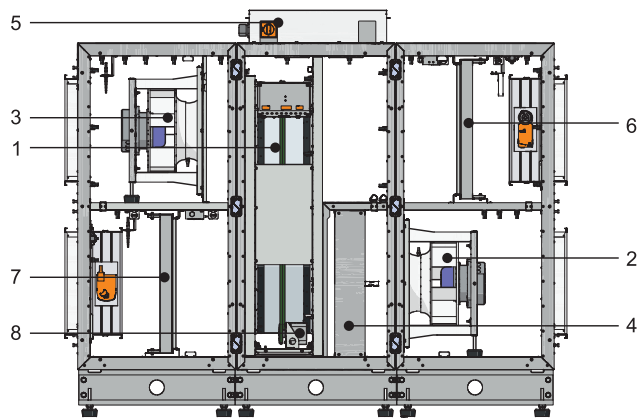


Figure 4.6.2. RIRS 2500-3500 HE EKO 3.0 construction (right side)

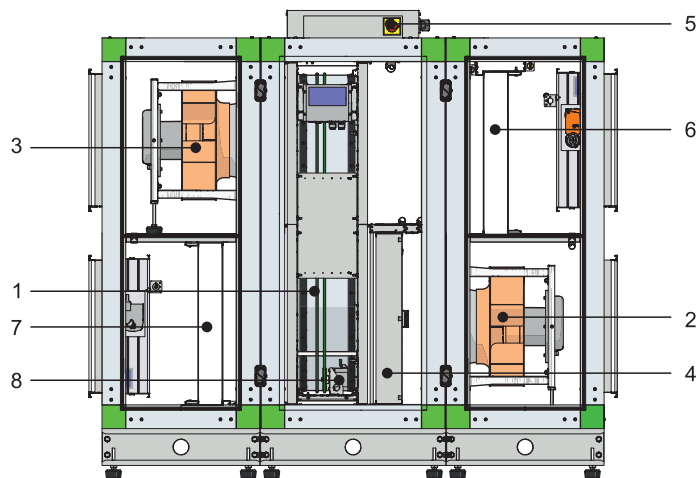


Figure 4.6.3. RIRS 5500 HE EKO 3.0 construction (right side)

1 - rotor heat exchanger; 2 - Supply fan; 3 - Exhaust fan; 4 - Electrical heater; 5 - Control board; 6 - Extract air filters (panel); 7 - Supply air filter (panel); 8 - rotor motor.


5. INSTALATION

5.1. RECEPTION OF GOODS

Each device is carefully checked before transportation. When receiving the goods, checking the devices for any damage made during transportation is recommended. If any damage to the unit is observed, immediately contact the representatives of a transport company. Please inform the representative of the manufacturer, if any deviation of the device is noticed.

5.2. TRANSPORTATION AND STORAGE

- All units are factory-packaged to withstand normal conditions of transportation.
- When unpacking, check the unit for any damage made during transportation. Installing of damaged units is not allowed!
- The packaging is used for protection purpose only!
- When unloading and storing the units, use suitable lifting equipment to avoid damage and injuries. Do not lift units by holding on power supply cables, connection boxes, air extract or exhaust flanges. Avoid hits and shock overloads. Before installation, the units must be stored in a dry room with the relative air humidity not exceeding 70% (at +20°C) and with an average ambient temperature ranging between +5 °C and +30 °C. The storage place must be protected against dirt and water.
- The units must be transported to the storage place or installation site using forklifts.
- The recommended storage period should not be longer than one year. In case of storing the units for a period longer than one year, checking if the fan bearings and motor rotate without difficulty (turning the impeller by hand) and if the electric circuit insulation is not damaged or the moisture has not accumulated must be performed before the installation of the unit.

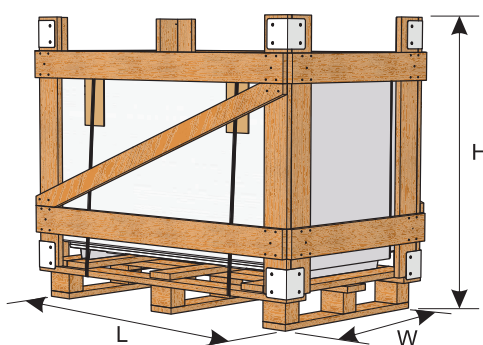

	H	W	L	Max. number of transported packages
	[mm]	[mm]	[mm]	[pcs.]
RIRS EKO 3.0				
1200 HE	1220	985	1520	1
1200 HW	1220	985	1520	1
1900 HE	1220	985	1520	1
1900 HW	1220	985	1520	1
2500 HE	1635	1240	1800	1
2500 HW	1635	1240	1800	1
3500 HE	1820	1350	2100	1
3500 HW	1820	1350	2100	1
5500 HE	1870	1500	2050	1
5500 HW	1870	1500	2050	1

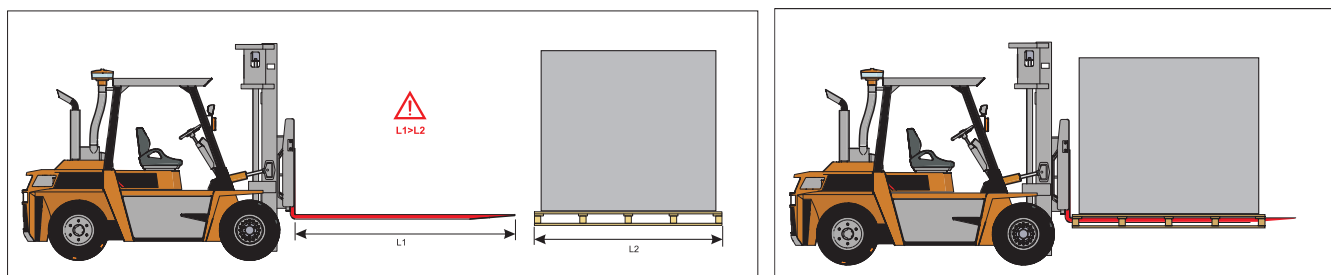


Figure 5.2.1. Lifting by forklift.



In order to prevent damage to the casing, only a product placed on a pallet should be lifted.

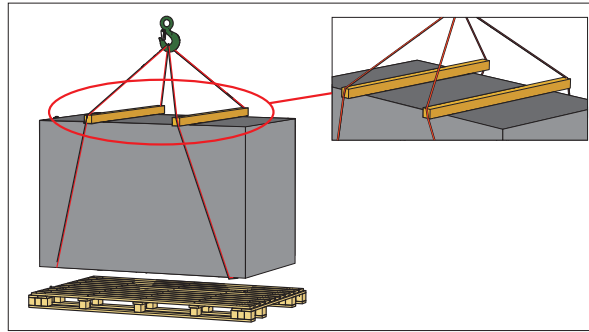



Figure 5.2.2. Lifting

5.3. UNPACKING



Accessories may be packed together with the product. Prior to transporting the unit, the accessories should be unpacked first.

- Remove the film from the unit.
- Remove the bracing packaging tape that keeps the protective profiles in place.
- Remove the protective profiles.
- After unpacking the unit, examine it to make sure that no damage was made during transportation. Installing of damaged units is not allowed!
- Before commencing the installation of the unit, please check if all ordered equipment have been delivered. Any variation from the ordered equipment list must be reported to the product supplier.

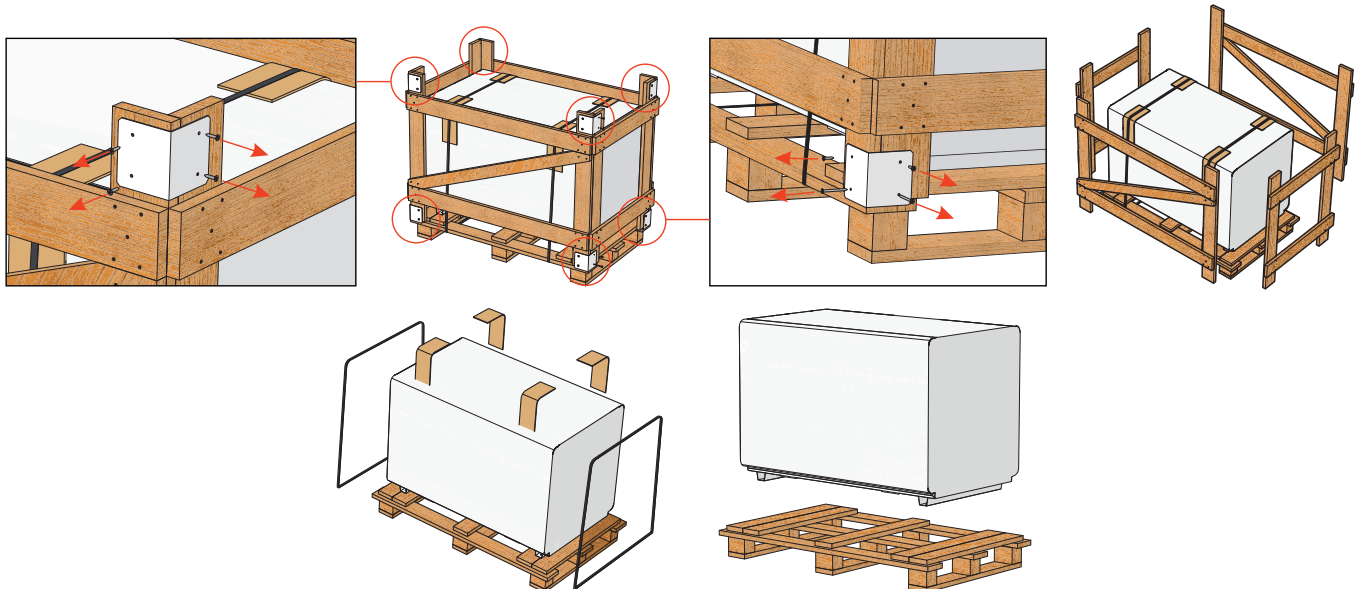

5.4. PIPING AND INSTRUMENTATION DIAGRAM

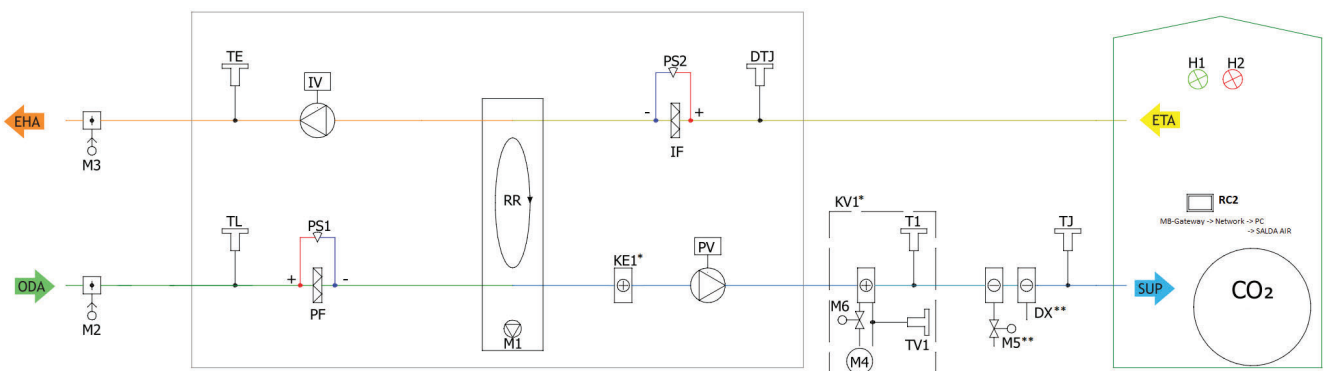


Figure 5.4.1. RIRS 1200-1900 H EKO 3.0

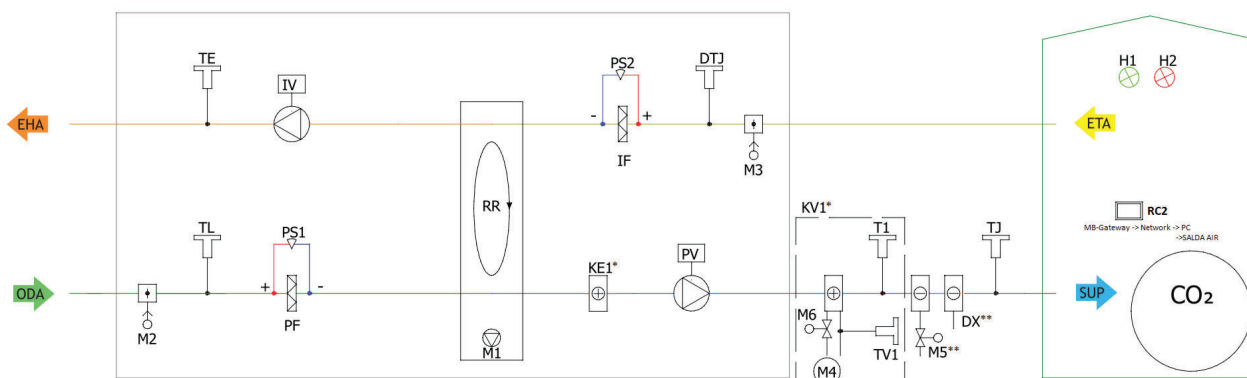


Figure 5.4.2. RIRS 2500-5500 H EKO 3.0

* KE1 - only in electrical version; * KV1 - used in water version; ** Possible to control.

THE LIST OF COMPONENTS

PV	Supply air fan	IF	Extract air filter
PF	Supply air filter	IV	Exhaust fan
TE	Exhaust air temperature sensor	TJ	Supply air temperature sensor
DTJ	Extract air temperature and humidity sensor	CO2	CO2 sensor
PC	Computer	KE1	Electric heater*
M2	Outdoor air damper actuator	M3	Exhaust air damper actuator
TL	Outdoor air temperature sensor		Ventilated premises
NET	Network	MB-Gateway	Network module
R	Rotor heat exchanger	DX	DX cooler
KV1	Water heater*	T1	Water heater thermostat*
M4	Water heater circulation pump*	M5	Water cooler valve motor
RC2	Stouch, Flex or ST-SA-Control remote control panel	M6	Water heater valve motor*
TV1	Water heater temperature sensor *	M1	Rotor motor
PS1	Supply air filter differential pressure sensor	PS2	Extract air filter differential pressure sensor

* Component/possibility to connect it depends on model.

POSSIBLE PCB INPUTS/OUTPUTS


FA	Fire alarm	H1	Working indication output
	Fans speed switch (BOOST)	H2	Alarm indication output
	System mode switch (START/STOP)		

5.5. MOUNTING

- Installation should be carried out by qualified and trained staff only.
- When connecting air ducts, consider the labels on the casing of the unit.
- Before connecting to the air duct system, the connection openings of ventilation unit should be closed.
- When connecting the ducts, the air-flow direction indicated on the device housing should be observed.
- Do not connect the bends close to connection flanges of the unit. The minimum distance of the straight air duct between the unit and the first branch of the air duct in the supply air duct must be 1xD, in air exhaust duct 3xD, where D is the diameter of the air duct.
- It is recommended to use the brackets (accessories). This will reduce the vibration transmitted by the unit to the air duct system and environment.
- Sufficient space must be provided for opening of the manhole and filter covers.
- If the ventilation unit is wall-mounted wall, it may transmit noise vibrations to the premises. Though the level of noise generated by the fans is admissible, mounting the unit at the distance of 400 mm from the nearest wall is recommended. Where this is not possible, mounting of the unit on the wall of the room where the level of noise is not significant is recommended.
- Ducts are connected to the unit in such way that they could be easily disassembled and the heater could be removed from the unit when carrying out maintenance, servicing and/or repairs




The protective film is used to protect the unit during transportation. It is recommended to remove the film; otherwise, oxidation signs may occur.

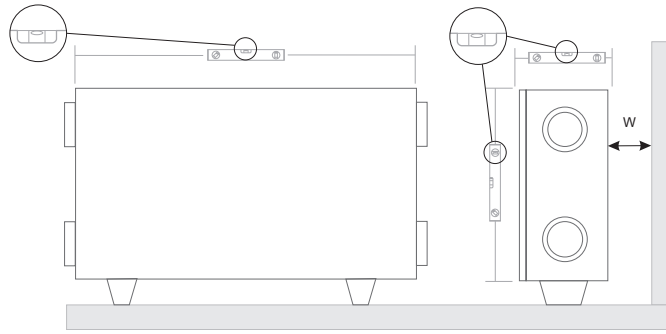

Horizontal floor-mounting positions on floor (W=400 mm)

5.5.1. UNIT PLACING AND MOUNTING POSITIONING REQUIREMENTS

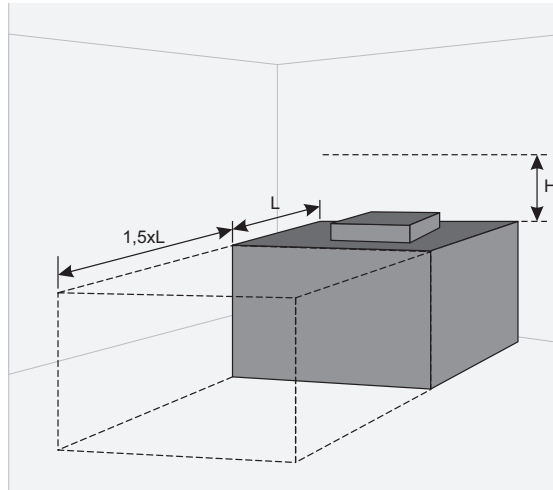

Min. distance to open the door - 1,5xL; Min. distance to open the control box door - H > 400 mm.

5.5.2. FLOOR MOUNTING

- The installation should be performed having positioned the units in horizontal direction only.
- Install the supporting legs.
- The units are assembled from separate sections.
- They must be adjusted without a gradient.
- Leave space in front (2xL) so that it would be sufficient to open the doors and to remove or install a required component.

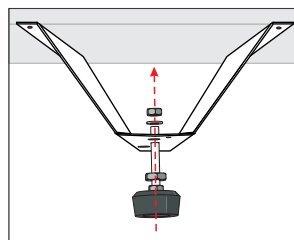


Figure 5.5.2.1. Floor mounting

5.6. CONNECTION OF THE AIR DUCT

- The connected air ducts must not be bent and have separate fixing.
- Make sure that the fans can not be accessed through air duct heads. Otherwise, protective grid should be installed. You may choose the grid from the range of products provided in our website.
- Do not reduce the diameter of the piping near air inlet or exhaust ducts. If you want to reduce the airflow speed in the system, drop of pressure and noise level, you can increase the diameter.
- In order to reduce the level of the noise in the air supply system, install dampers (see the chapter on air supply system installation).
- In order to reduce air loss in the system, the air ducts and profile components should be of class C and higher. The catalog on the above-mentioned items can be found in our website.
- External air and exhaust system piping should be isolated in order to prevent heat loss and condensation.
- Maintaining the distance of up to 8 meters between air intake and air exhaust ducts is recommended. Air supplying system should be installed away from potential air pollution sources.
- When installing air ducts next to the ventilation equipment, brackets must be used. They suppress vibration and assure secure installation of the

various system parts. The necessary brackets can be found in our catalog or website.

- Air ducts are often mistakenly connected in inappropriate location. The ventilation units bear the labels indicating the correct air duct connection layout. Before starting up the system, carefully check if all related works have been performed properly.



For flange diameters see chapter " DIMENSIONS AND WEIGHT".

5.7. CONNECTION OF THE UNIT TO ELECTRIC NETWORK

- Supply voltage to the unit must be connected by a qualified specialist following the manufacturer's instructions and applicable safety guidelines.
- The unit's power network voltage must correspond to electro technical specifications of the unit indicated in the technical decal.
- The unit's voltage, power and other technical specifications are provided in the unit's technical decal (on the unit casing). The unit must be connected to the voltage plug socket of the grounded power network in accordance with the applicable requirements.
- The unit must be earthed according to electrical equipment installation regulation.
- Using extension wires (cables) and power network plug socket distribution devices is not allowed.
- Prior to carrying out any ventilation unit installation and connection works (before the unit is commissioned), the unit must be disconnected from the power network.
- After installation of the ventilation unit, the power network plug socket must be accessible at any time. If the unit is equipped with circuit breaker, disconnection from the power network is performed through the two-pole or four-pole circuit breaker (by disconnecting phase poles and neutral).
- Before it is connected to the power network, the unit must be carefully checked for any damage (execution, control, and measurement nodes) made during transportation.
- The power cable can be replaced only by a qualified technician, having evaluated the rated power and current.



The manufacturer does not assume any liability for personal injuries and property damage due to nonconformance with the provided instructions.

5.8. START-UP RECOMMENDATIONS

5.8.1. SYSTEM PROTECTION

The control board of the unit is equipped with the following integrated devices for the protection against short circuit:

RIRS EKO 3.0	1200 HE	1200 HW	1900 HE	1900 HW	2500 HE	2500 HW	3500 HE	3500 HW	5500 HE	5500 HW
F1	6,3	10	10	2	10	10			6,3	2
Q3 (F2)		1		10		1	16	1	10	
Q2	16		16		16		20	16	25	10

It is recommended to use the unit with external electrical protection device.

RIRS EKO 3.0	1200 HE	1200 HW	1900 HE	1900 HW	2500 HE	2500 HW	3500 HE	3500 HW	5500 HE	5500 HW
Mains Fuse	25A	10A	25A	10A	25A	10A	40A	16A	40A	10A



To ensure safe maintenance of the unit, it is necessary to turn off main switch and/or external protection device.

5.8.2. PRE-STARTUP RECOMENDATIONS OF THE UNIT (IN THE PRESENCE OF THE ENDUSER)

Prior to start-up, the system must be carefully cleaned. Check for the following:

- operation systems and unit elements as well as automation and automation devices were not damaged during installation,
- all electrical devices are connected to power supply and fit for service,
- all necessary automation elements are installed and connected to power supply and terminal blocks,
- cable connection to terminal blocks comply with the existing wiring diagrams,
- all electrical equipment protection components are properly connected (if they are additionally used),
- cables and wires correspond to all applicable safety and functional requirements, diameters, etc.,
- earthing and protection systems are properly installed,
- condition of all seals and sealing surfaces is proper.

6. MAINTENANCE

6.1. SAFETY INSTRUCTION



Unplug the unit from the mains before opening the door (disconnect the power plug from the outlet or in case an automatic circuit breaker installed, disconnect it as well. Make sure that it cannot be turned on by third parties) and wait until the fans completely stop (for about 2 min.).

6.2. GENERAL RECOMMENDATIONS FOR VENTILATION SYSTEM MAINTENANCE

In order to ensure proper functioning of the system, maintenance requirements and its periods should be observed. Otherwise, the warranty shall be void. Some recommendations are provided in the table below, but they are just advisory, as the need for system maintenance depends on the location of the unit installation, the pollution of atmosphere, population, working hours, etc.

COMPONENT	DURING START-UP	AT LEAST EVERY 6 MONTHS
Filters	Check the cleanliness of the filters	Replace filters every 3 to 4 months or according to the control device indications. Check cleanliness. Clean, if necessary Make sure that the impellers are not unbalanced.
Fans	Check the connections and the direction of rotation	Make sure that the impellers do not cause noise when rotated by hand. Make sure that the fastening screws are not loose and free of mechanical damage. Check electrical connections and make sure that these are secured properly and are free of signs of corrosion.
Rotor heat exchanger	Check the cleanliness of the heat exchanger	Check cleanliness and clean, if necessary Check the tension of a belt
Control panel	Check the connections	Check the connections
Electric heater	Check the connections	Clean off dust, and check the electrical components and connections of the heater
Pressure sensor	Check electrical connections	Check the operation
Temperature sensor	Check electrical connections	Check the operation
Air supply and extract system	Check the connections	Clean
Air duct system	Check the tightness	Clean
Dampers, diffusers, grid	Check the tightness of connections	Clean
Switching unit (contactor)		Every 3 to 4 months, visually assess the functioning of the switching unit (contactor), i.e. make sure that its casing has no signs of melting or is not thermally damaged otherwise and does not produce any unusual sounds. All the contactors in the product or in its accessories must be checked.

6.3. COVER OPENING

Before opening the covers, first, unplug the unit from the mains, then wait for 2 minutes (until the fans completely stop).

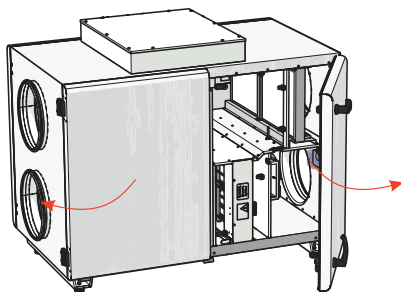


Figure 6.3.1. RIRS 1200-1900 H EKO 3.0

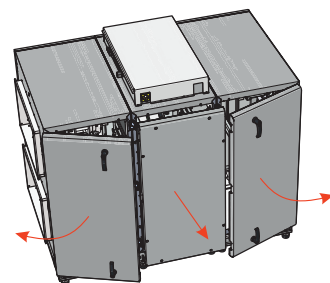


Figure 6.3.2. RIRS 2500-3500 H EKO 3.0


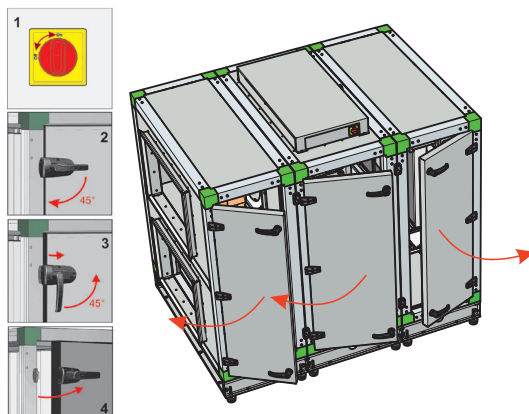


Figure 6.3.3. RIRS 5500 H EKO 3.0

6.4. FILTERS MAINTENANCE

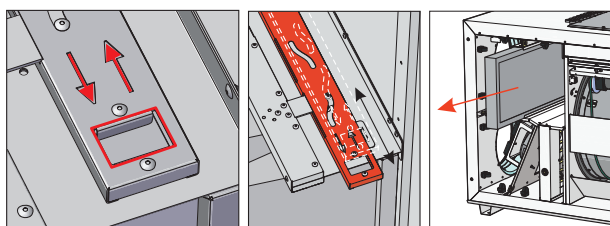

In order to remove the filters, open unit door and take off the filters.

Dirt increases air resistance in the filter, therefore, lower amount of air is supplied into the premises. Arrows on the filters must comply with airflow direction.




**After changing the filters, please reload the filter timer. The instruction on reloading can be found in the control panel operation manual or on our website www.salda.it
Operation of the unit without filters is not allowed.**



Change the filters every 3-4 months or according to the notification on the control device.

6.5. ROTOR MAINTENANCE

- Maintenance of rotor heat exchanger must be performed on annual basis, once per year.
- Ensure the gaps of heat exchanger are clean, the brushes are not worn, the belt drive is not worn, and the clamping nodes of the rotor heat exchanger are tight.
- Rotor heat exchanger can be easily removed from the unit. Disconnect the power cord of the motor of heat exchanger, release and raise the clamp of the rotor heat exchanger section, and then remove the heat exchanger.
- Heat exchanger must be cleaned using the solution of warm water and non-corrosive toward aluminium alkaline agent or an air stream. Applying direct stream of liquid is not recommended, because this can cause damage to the device.
- While cleaning, make sure that no moisture and liquid will enter into the motor of the heat exchanger.
- Having reinstalled the heat exchanger, fasten its section with the clamp. Connect the heat exchanger motor.

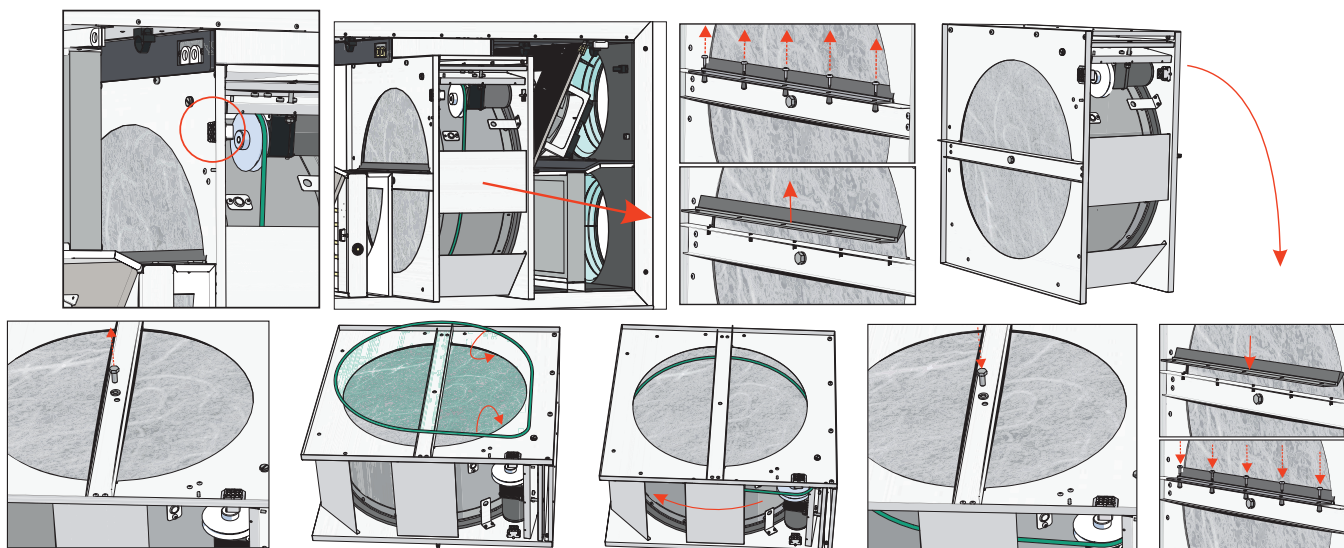




CAUTION: heat exchanger cannot be used when the filters are removed!

6.6. FANS MAINTENANCE

- Fan maintenance should be performed by experienced and trained staff only.
- The fan should be inspected and cleaned at least once per year.
- Prior to commencing any maintenance or repairs, make sure the fan is disconnected from the power source.
- Proceed to maintenance and repair after any fan rotation is stopped.
- Observe staff safety regulations during maintenance and repairs.
- The motor features a heavy-duty ball bearing design. The motor is completely sealed and grease-free.
- Detach the fan from the unit.
- The impeller should be particularly checked for built-up material or debris that may cause an imbalance. Excessive imbalance may lead to accelerated wear on motor bearings and vibration.
- Clean impeller and inside housing with mild detergent, water and damp, soft cloth.
- Do not use high-pressure cleaner, abrasives, sharp tools or caustic solvents that may scratch or damage the housing and impeller.
- Do not plunge the motor into any fluid while cleaning the impeller. Make sure the impeller's balance weights are not moved.
- Make sure the impeller is free of any obstacles.
- Install the fan back into the unit. Connect fan power and control signals.
- In case the fan after maintenance does not automatically start up or stop, contact the manufacturer. Malfunction of the fan can be identified by the pressure in the system (when pressure switches are connected). In case of any fault in the fan motor, a notice will appear on the control panel.




Prior to commencing any maintenance or repairs, make sure the unit is disconnected from the power source.

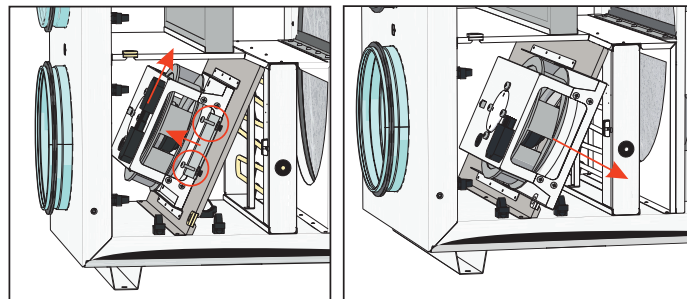


6.7. HEATER MAINTENANCE

- In case manual protection is activated, check for a fault before pressing the RESET button. If the fault is identified after it has been rectified, press the RESET button using a screwdriver or a similar object.
- Electrical heater does not require additional servicing. The filters must be replaced as described above.
- Heaters are equipped with 2 thermal protection devices: an automatic self-resetting protection device that is activated at +50 °C, and a manually restored protection device that is activated at +100 °C.
- After an activation of the manually restored protection device, make sure the unit is disconnected from the power supply. Wait until all heating elements cool down and the fans completely stop. Having identified and rectified the failure, to start the unit, press the RESET button. The failure can be identified by a qualified technician only.
- If necessary, electric heater can be removed. Disconnect the electrical connector from the heater and remove the heater.

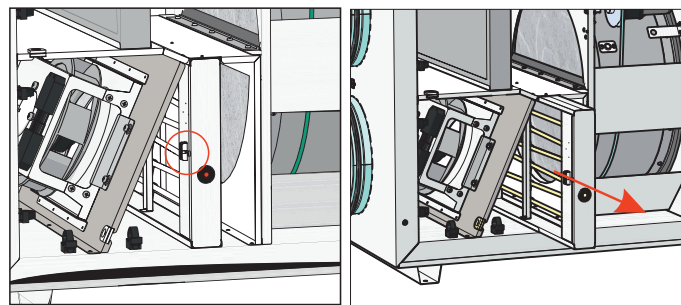

6.8. CONTROL BOARD MAINTENANCE

- Disconnect product unit from electric power source.
- Unscrew the bolts on the control box.
- Remove the control box cover.
- Disconnect all cables, wires, and connectors from the control board and unscrew the control board mounting bolts.
- Remove control board.
- To reassemble, follow all maintenance steps in reverse order. When re-connecting cables, wires, and connectors, make sure to match each wire and connector to corresponding connection terminal and connector.

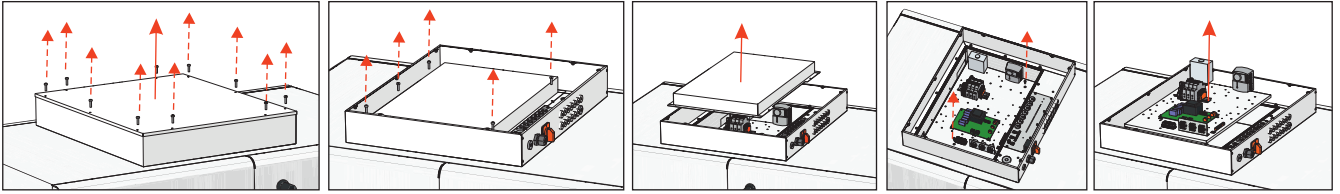

7. CONTROL

7.1. DEVICE CONTROL

Ventilation unit equipped with PRV control board can be controlled with remote controller, WEB interface or mobile app via MB-GATEWAY and BMS (building management system). More information provided in the table below.

With MB-GATEWAY	Remote control panels	BMS direct connection	Wireless communication
Web interface SALDA AIR mobile application BMS over Modbus TCP/IP BMS over BACnet TCP/IP	Stouch ST-SA-Control FLEX	Modbus RTU (RS485)	MB-GATEWAY + WIFI router

7.2. DEVICE FUNCTIONS

PRV control board operation functions and control of the device depends on the following:

 













 





1. Selected control interface (remote control panel, MB-GATEWAY, etc.). The selected interface affects access to the information and settings, however, it does not affect the logic of control. Full access to the information and settings is available on FLEX, ST-SA-Control, MB-GATEWAY WEB application and SALDA AIR mobile application.
2. Unit configuration (internal/external components, sensors and control board settings).




 










Refer to the instruction manual of the existing control device for unit control instructions.

 











8. ACCESSORIES

RIRS EKO 3.0		1200 HE	1200 HW	1900 HE	1900 HW	
Roofs		Roof RIRS 1200/1900 H EKO 3.0	ACC000039	ACC000039	ACC000039	ACC000039
		Roof CB 315	ACC004737	ACC004737	ACC004737	ACC004737
Outlet covers		ABV 315	ACC000057	ACC000057	ACC000057	ACC000057
		LSVF 315	FIT000308	FIT000308	FIT000308	FIT000308
Valves		VVP45.10-0.63	-	ACC000140	-	ACC000140
		VXP45.10-0.63	-	ACC000143	-	ACC000143
External sensors		Sensor CO ₂ duct S-KCO2	ACC000277	ACC000277	ACC000277	ACC000277
		Sensor CO ₂ room S-RCO2-F2	ACC000278	ACC000278	ACC000278	ACC000278
		Pressure transmitter S-1141	ACC004375	ACC004375	ACC004375	ACC004375
Heater/cooler insulated (module)		CB 315 C2+DE	ACC000165	ACC000165	ACC000165	ACC000165
		CB 315 C4+DE	ACC000166	ACC000166	ACC000166	ACC000166
		CB 315 F2+DE	ACC000167	ACC000167	ACC000167	ACC000167
		CB 315 F4+DE	ACC000168	ACC000168	ACC000168	ACC000168
		CB 315 H1	-	ACC000169	-	ACC000169
		CB 315 H1+C2+DE	-	ACC000170	-	ACC000170
		CB 315 H1+C4+DE	-	ACC000171	-	ACC000171
		CB 315 H1+F2+DE	-	ACC000172	-	ACC000172
		CB 315 H1+F4+DE	-	ACC000173	-	ACC000173
		CB 315 H2	-	ACC000174	-	ACC000174
		CB 315 H2+C2+DE	-	ACC000175	-	ACC000175
		CB 315 H2+C4+DE	-	ACC000176	-	ACC000176
		CB 315 H2+F2+DE	-	ACC000177	-	ACC000177
		CB 315 H2+F4+DE	-	ACC000178	-	ACC000178
Heaters/coolers (on duct)		AVA 315	ACC000194	ACC000194	ACC000194	ACC000194
		AVA-DX 315	ACC000148	ACC000148	ACC000148	ACC000148
		AVS 315	ACC000201	ACC000201	ACC000201	ACC000201
Dampers		SKG-A 315	FIT000206	FIT000206	FIT000206	FIT000206
Silencers		MUTE 315x1200	FIT000295	FIT000295	FIT000295	FIT000295
		MUTE 315x600	FIT000296	FIT000296	FIT000296	FIT000296
		MUTE 315x900	FIT000297	FIT000297	FIT000297	FIT000297

Filter sets		Filter set RIRS 1200/1900 V/H EKO 3.0 (ePM10-50+ePM1-70-2pcs.)	ACC004884	ACC004884	ACC004884	ACC004884
		Network module MB-Gateway	ACC000269	ACC000269	ACC000269	ACC000269
		Remote control panel FLEX	ACC000270	ACC000270	ACC000270	ACC000270
		Remote control panel ST-SA-Control	ACC000271	ACC000271	ACC000271	ACC000271
Control		Remote control panel Stouch	ACC000272	ACC000272	ACC000272	ACC000272
		Switch 774451 + 774411	ACC004460	ACC004460	ACC004460	ACC004460
		Router TP-Link TL-WR802N	ACC000273	ACC000273	ACC000273	ACC000273
		Actuator for damper LM230A-TP	ACC000311	ACC000311	ACC000311	ACC000311
Actuators		Actuator for damper LF230	-	ACC000309	-	ACC000309
		Actuator for water valve SSB61 200 Nm	-	ACC000317	-	ACC000317
		Actuator for water valve SSB81 200 Nm	ACC000318	ACC000318	ACC000318	ACC000318
RIRS EKO 3.0			2500 HE	2500 HW	3500 HE	3500 HW
Roofs		Roof RIRS 2500 H EKO 3.0	ACC000040	ACC000040	-	-
		Roof RIRS 3500 H EKO 3.0	-	-	ACC000041	ACC000041
		Roof CB 700x400	ACC000051	ACC000051	ACC000051	ACC000051
		OCR 700x400	ACC000062	ACC000062	ACC000062	ACC000062
Outlet covers		LJ-E 70-40	FIT000761	FIT000761	FIT000761	FIT000761
		LJ-PG 70-40	FIT000321	FIT000321	FIT000321	FIT000321
		STP-C 700x400/500	ACC000021	ACC000021	ACC000021	ACC000021
Actuators		Actuator for water valve SSB61 200 Nm	-	ACC000317	-	ACC000317
		Actuator for water valve SSB81 200 Nm	ACC000318	ACC000318	ACC000318	ACC000318

Silencers		AKS 500-12	FIT000447	FIT000447	FIT000447	FIT000447
		AKS 500-9	FIT000281	FIT000281	FIT000281	FIT000281
		SKS 70-40	FIT000302	FIT000302	FIT000302	FIT000302
Heater/cooler insulated (module)		CB 700x400 C2+DE	ACC000223	ACC000223	ACC000223	ACC000223
		CB 700x400 C4+DE	ACC000224	ACC000224	ACC000224	ACC000224
		CB 700x400 F2+DE	ACC000225	ACC000225	ACC000225	ACC000225
		CB 700x400 F4+DE	ACC000226	ACC000226	ACC000226	ACC000226
		CB 700x400 H1	-	ACC000227	-	ACC000227
		CB 700x400 H1+C2+DE	-	ACC000228	-	ACC000228
		CB 700x400 H1+C4+DE	-	ACC000229	-	ACC000229
		CB 700x400 H1+F2+DE	-	ACC000230	-	ACC000230
		CB 700x400 H1+F4+DE	-	ACC000231	-	ACC000231
		CB 700x400 H2	-	ACC000232	-	ACC000232
		CB 700x400 H2+C2+DE	-	ACC000233	-	ACC000233
		CB 700x400 H2+C4+DE	-	ACC000234	-	ACC000234
		CB 700x400 H2+F2+DE	-	ACC000235	-	ACC000235
		CB 700x400 H2+F4+DE	-	ACC000236	-	ACC000236
Filter sets		Filter set RIRS 2500 H EKO 3.0 (ePM10-50+ePM1-70-2pcs.)	ACC004890	ACC004890	-	-
		Filter set RIRS 3500 H EKO 3.0 (ePM10-50-2pcs+ePM1-70-2pcs)	-	-	ACC004893	ACC004893
Heaters/coolers (on duct)		AVA 500	ACC000196	ACC000196	ACC000196	ACC000196
		AVA-DX 500	ACC000150	ACC000150	ACC000150	ACC000150
		AVS 500	ACC000203	ACC000203	ACC000203	ACC000203
			SVS 700x400-2	ACC000262	ACC000262	ACC000262
SVS 700x400-4	ACC000263		ACC000263	ACC000263	ACC000263	
Control		Network module MB-Gateway	ACC000269	ACC000269	ACC000269	ACC000269
		Remote control panel FLEX	ACC000270	ACC000270	ACC000270	ACC000270
		Remote control panel ST-SA-Control	ACC000271	ACC000271	ACC000271	ACC000271
		Remote control panel Stouch	ACC000272	ACC000272	ACC000272	ACC000272
		Switch 774451 + 774411	ACC004460	ACC004460	ACC004460	ACC004460
		Router TP-Link TL-WR802N	ACC000273	ACC000273	ACC000273	ACC000273


External sensors		Sensor CO ₂ duct S-KCO2	ACC000277	ACC000277	ACC000277	ACC000277
		Sensor CO ₂ room S-RCO2-F2	ACC000278	ACC000278	ACC000278	ACC000278
		Pressure transmitter S-1141	ACC004375	ACC004375	ACC004375	ACC004375
RIRS EKO 3.0					5500 HE	5500 HW
Roofs		Roof RIRS 5500 H EKO 3.0			ACC000042	ACC000042
		Roof CB 800x500			ACC000052	ACC000052
Heaters/coolers (on duct)		AVA 500			ACC000196	ACC000196
		AVA-DX 500			ACC000150	ACC000150
		AVS 500			ACC000203	ACC000203
		SVS 800x500-2			ACC000264	ACC000264
		SVS 800x500-4			ACC000265	ACC000265
Outlet covers		OCR 800x500			ACC000065	ACC000065
		LJ-E 80-50			FIT000764	FIT000764
		LJ-PG 80-50			FIT000320	FIT000320
		STP-C 800x500/500			ACC000022	ACC000022
	Heater/cooler insulated (module)		CB 800x500 C2+DE			ACC000237
		CB 800x500 C4+DE			ACC000238	ACC000238
		CB 800x500 F4+DE			ACC000239	ACC000239
		CB 800x500 H1			-	ACC000240
		CB 800x500 H1+C2+DE			-	ACC000241
		CB 800x500 H1+C4+DE			-	ACC000242
		CB 800x500 H1+F4+DE			-	ACC000243
		CB 800x500 H2			-	ACC000244
		CB 800x500 H2+C2+DE			-	ACC000245
		CB 800x500 H2+C4+DE			-	ACC000246
	CB 800x500 H2+F4+DE			-	ACC000247	
Silencers		AKS 500-12			FIT000447	FIT000447
		AKS 500-9			FIT000281	FIT000281
		SKS 80-50			FIT000303	FIT000303

Filter sets		Filter set RIRS 5500 H EKO 3.0 (ePM10-50-2pcs+ePM1-70-2pcs)	ACC004896	ACC004896
		Sensor CO ₂ duct S-KCO2	ACC000277	ACC000277
External sensors		Sensor CO ₂ room S-RCO2-F2	ACC000278	ACC000278
		Pressure transmitter S-1141	ACC004375	ACC004375
		Network module MB-Gateway	ACC000269	ACC000269
Control		Remote control panel FLEX	ACC000270	ACC000270
		Remote control panel ST-SA-Control	ACC000271	ACC000271
		Remote control panel Stouch	ACC000272	ACC000272
		Switch 774451 + 774411	ACC004460	ACC004460
		Router TP-Link TL-WR802N	ACC000273	ACC000273
Actuators		Actuator for water valve SSB61 200 Nm	-	ACC000317
		Actuator for water valve SSB81 200 Nm	ACC000318	ACC000318

8.1. CONNECTION OF ACCESSORIES

8.1.1. FIRE PROTECTION SIGNAL INPUT (FIRE PROTECTION INPUT (NC))

Fire protection signal input must be normally closed, until the fire protection system is not connected a jumper is installed in the factory.

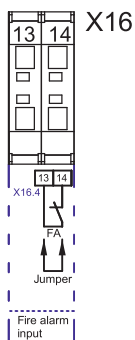

8.1.2. EXTERNAL CO2 /PRESSURE SENSORS

RIRS H EKO 3.0 units have two connections for external CO2/PRESSURE (input 0-10 VDC) sensors

Sensors connection:

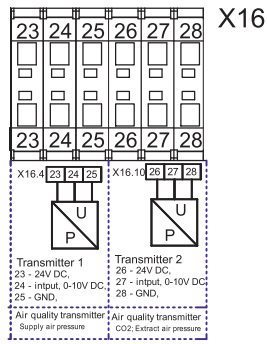


Figure 8.1.2.1. RIRS 1200-1900 H EKO 3.0


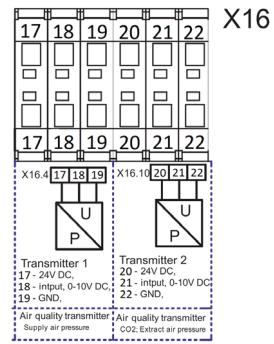


Figure 8.1.2.2. RIRS 2500-5500 H EKO 3.0


These sensors are intended for the following 3 functions: supply air pressure, extract air pressure and extract CO2 detection. Supply air pressure is measured inside the supply air duct referenced to the unit's surrounding area. Extract air pressure is measured inside the extract air duct referenced to the unit's surrounding area. The CO2 transmitter is installed in the extract air duct or room.

8.1.3. ROOM CO2 TRANSMITTER INSTALLATION RECOMMENDATION

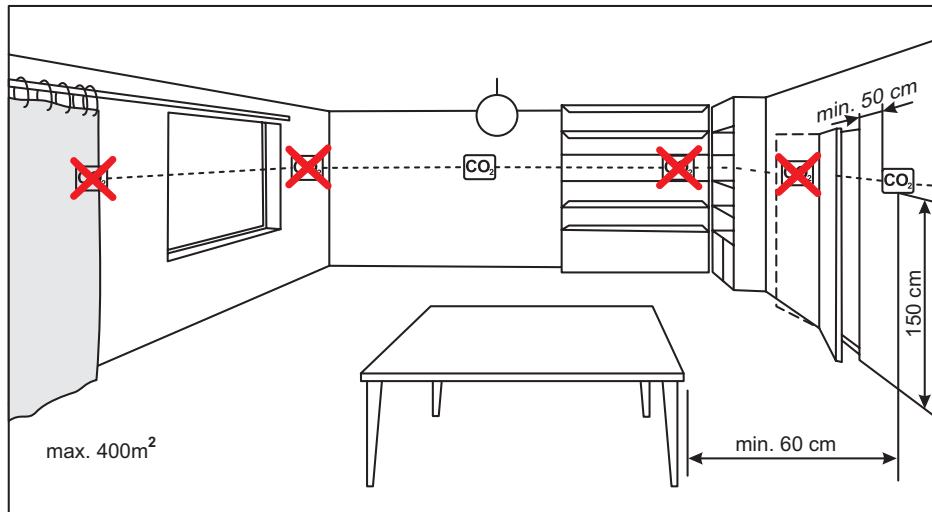

If the duct CO₂ transmitter is used, it must be installed in the extract air duct. To install duct transmitters, hole drilling tools are required .

8.1.4. CO2 CONCENTRATION ACCORDING TO PETTENKOFER LIMIT

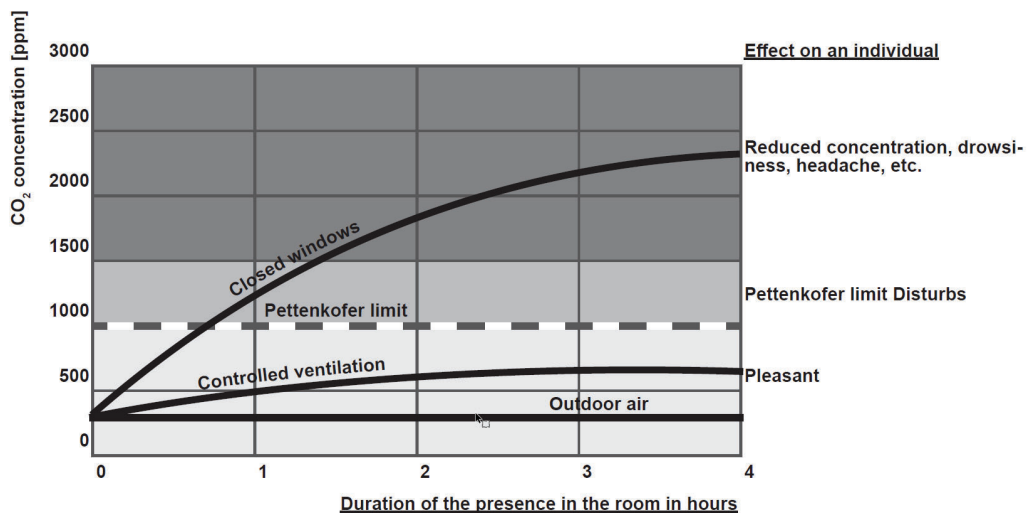


8.1.5. CONECTION OF AIR DAMPERS

Product RIRS 1200-1900 H EKO 3.0 can be equipped with supply air and extract air dampers. Dampers are controlled by Open/Close or Spring-return actuators.


Wiring diagram for RIRS 1200-1900 H EKO 3.0

M2, M3 – Open/Close damper actuators. Upon activation of outputs X16:17, X16:20 the dampers shall open, Upon activation of outputs X16:16, X16:19 the dampers shall close.

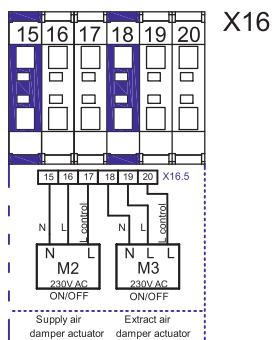


Wiring diagram for RIRS 1200-1900 H EKO 3.0

M2 – Spring-return damper actuator. M3 – Open/Close damper actuator. Upon activation of outputs X16:17, X16:20, the dampers open, Upon activation of output X16:19, the extract air damper close. The supply air damper is controlled by spring-return actuator so that when output X16:16 is deactivated, the supply air damper closes.

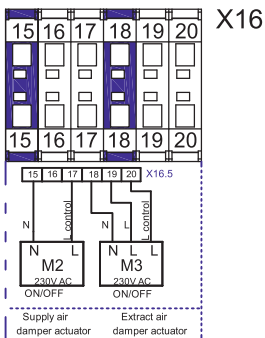

8.1.6. CONNECTION OF REMOTE CONTROL PANEL OR MODBUS

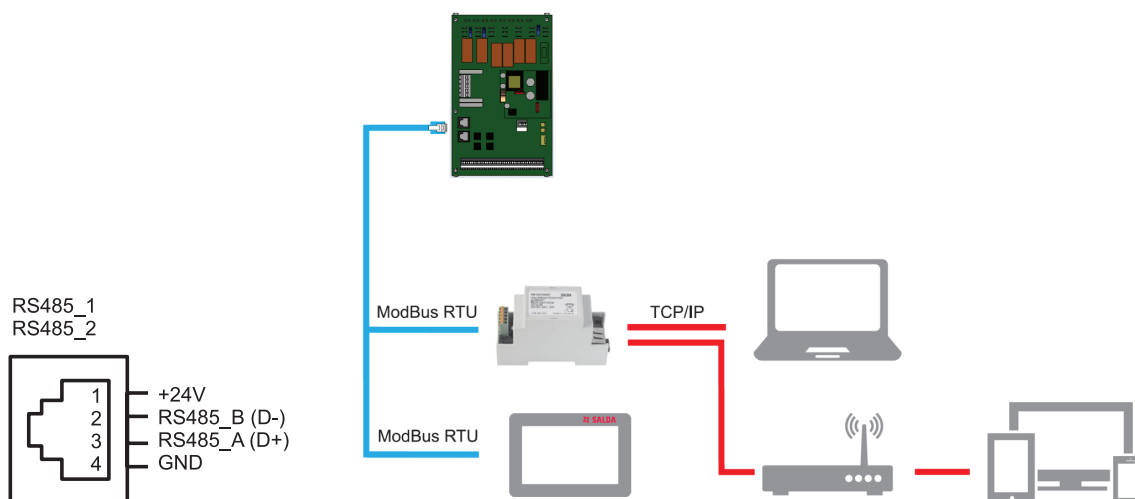

8.1.7. WATER HEATER CIRCULATION PUMP AND VALVE ACTUATOR

Water heater circulation pump and valve actuator can only be connected to the units that are designed to operate with water heater (RIRS HW EKO 3.0 units).

Wiring diagram

Valve actuator is controlled by 0-10 VDC signal. Circulation pump is controlled by On/Off signal.

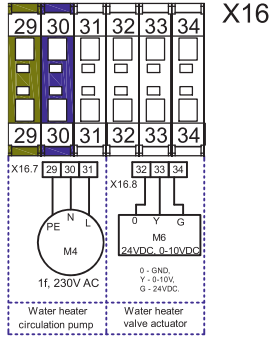


Figure 8.1.7.1. RIRS 1200-1900 H EKO 3.0


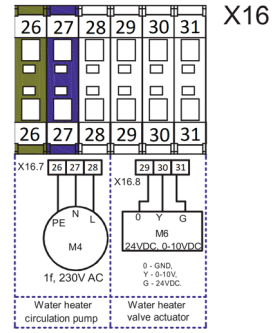


Figure 8.1.7.2. RIRS 2500-5500 H EKO 3.0

8.1.8. RECOMMENDED SCHEME FOR CONNECTION OF INTERNAL AND EXTERNAL COMPONENTS

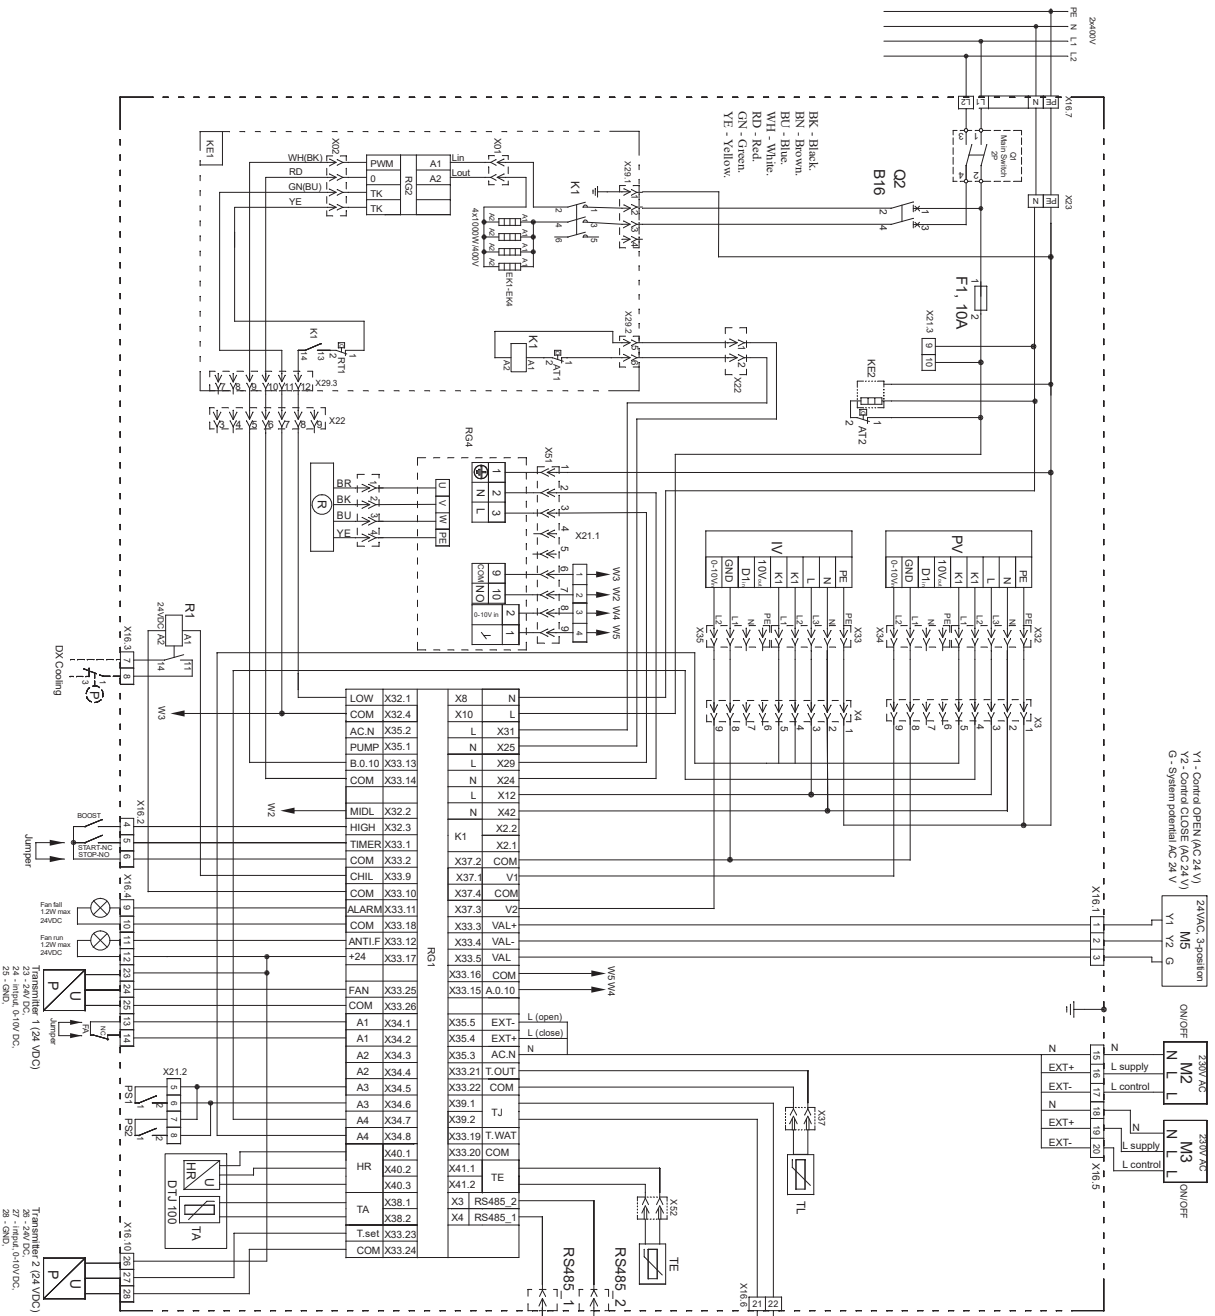

- PV - supply air fan EC,
- IV - extract air fan EC,
- KE1 - supply air heater,
- AT1 - automatic reset thermostat supply air heater,
- RT1 - manual reset thermostat supply air heater,
- TL - fresh air temperature sensor,
- TJ - supply air temperature sensor,
- DTJ100 - extract air temperature and humidity sensor,
- TE - exhaust air temperature sensor,
- M2 - outside air damper actuator,
- M3 - extract air damper actuator,
- M5 - Water cooler valve actuator,
- P - DX cooler protection, differential pressure switch,
- P/U - "Transmitter 1" supply air pressure transmitter (0-10 VDC),
- P/U - "Transmitter 2" extract air fan 0-10V pressure, CO2 transmitters,
- FA - fire alarms input,
- PS1 - supply air filter pressure relay,
- PS2 - extract air filter pressure relay,
- RG1 - controller PRV... V2.5,
- RG2, RG3 - controller ESKM1-28/176-30,
- Q2 - circuit breaker B16,
- F1 - fuse 10A (size 5x20),
- R - rotor motor 15W,
- C - capacitor.

Figure 8.1.8.1. RIRS 1200 HE EKO 3.0

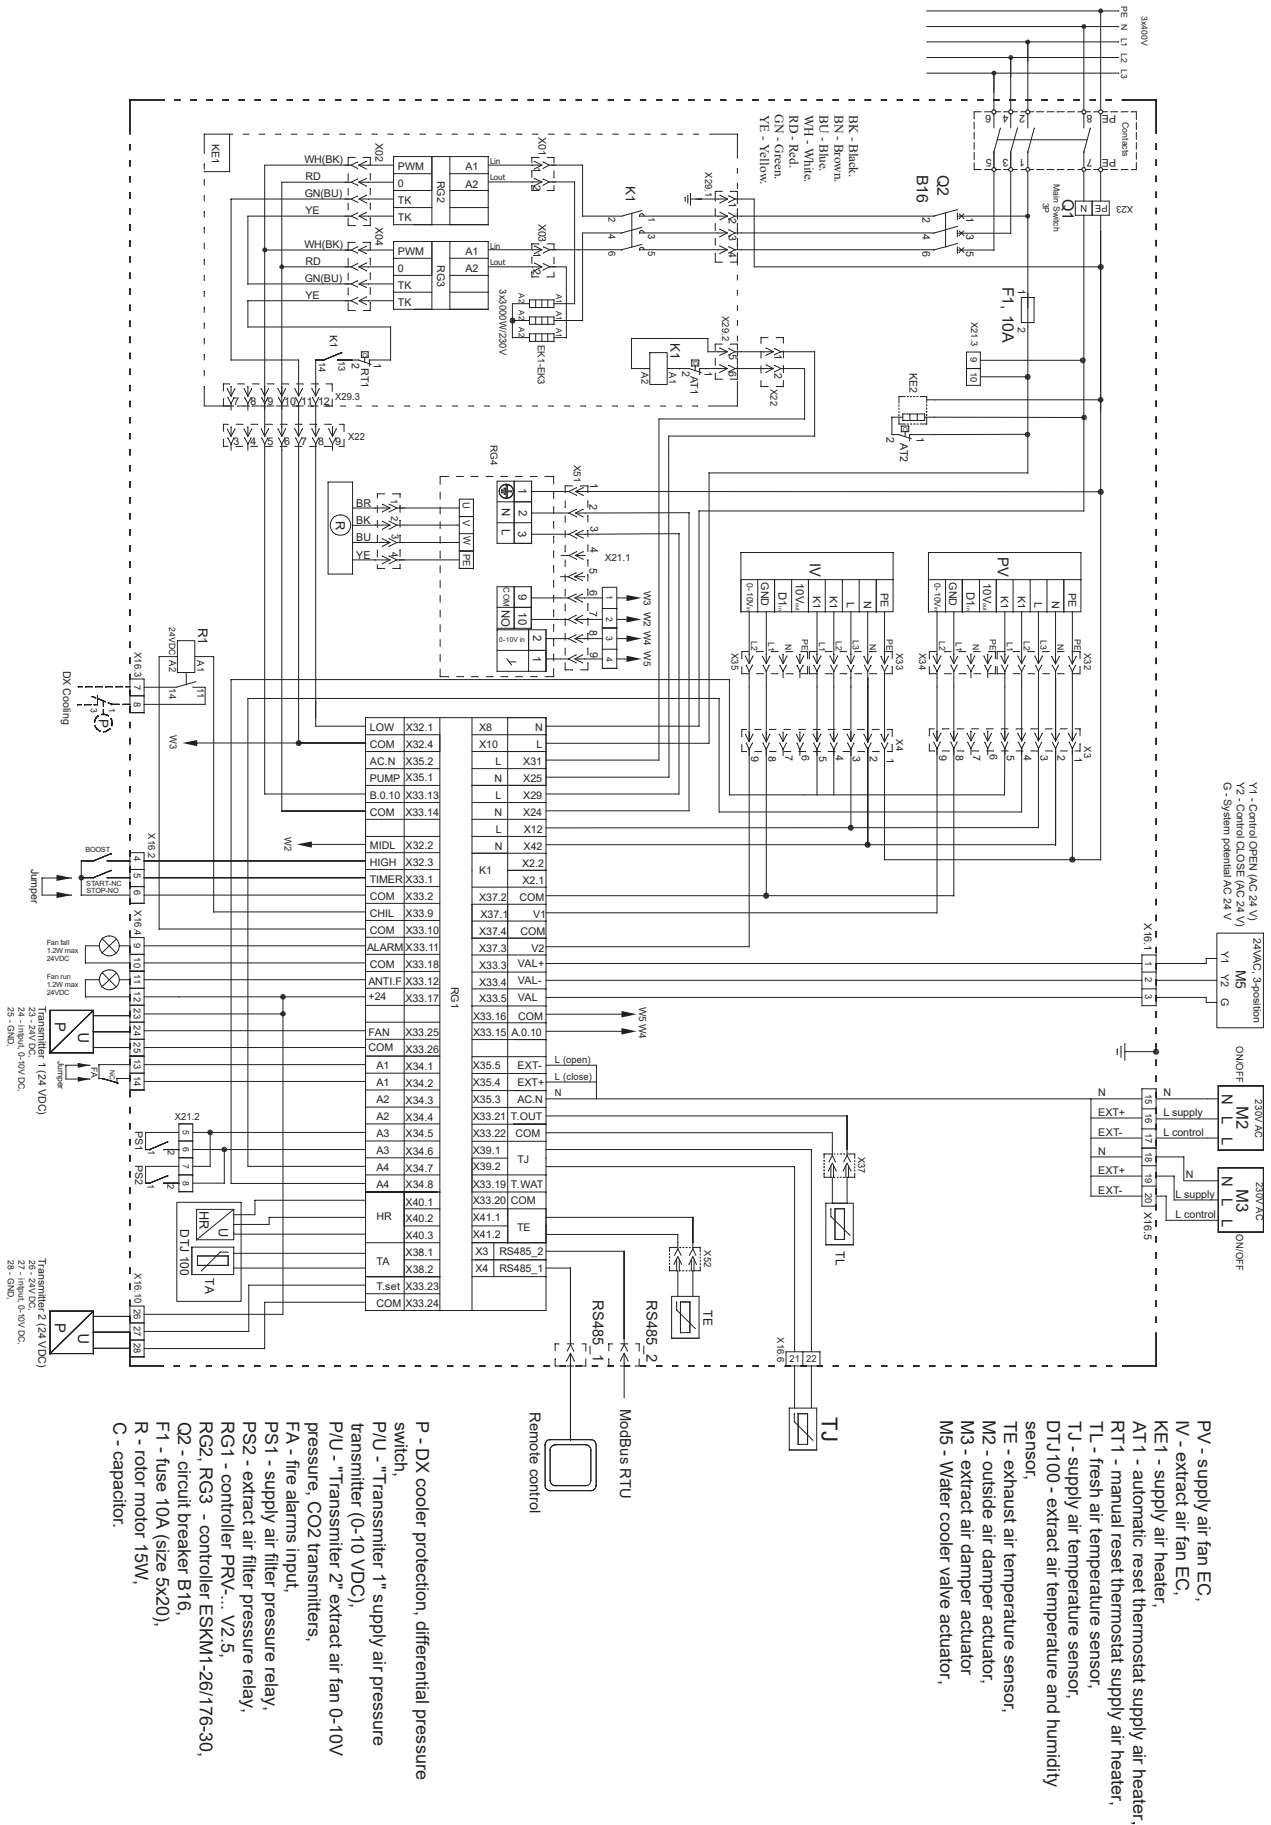


Figure 8.1.8.2. RIRS 1900 HE EKO 3.0

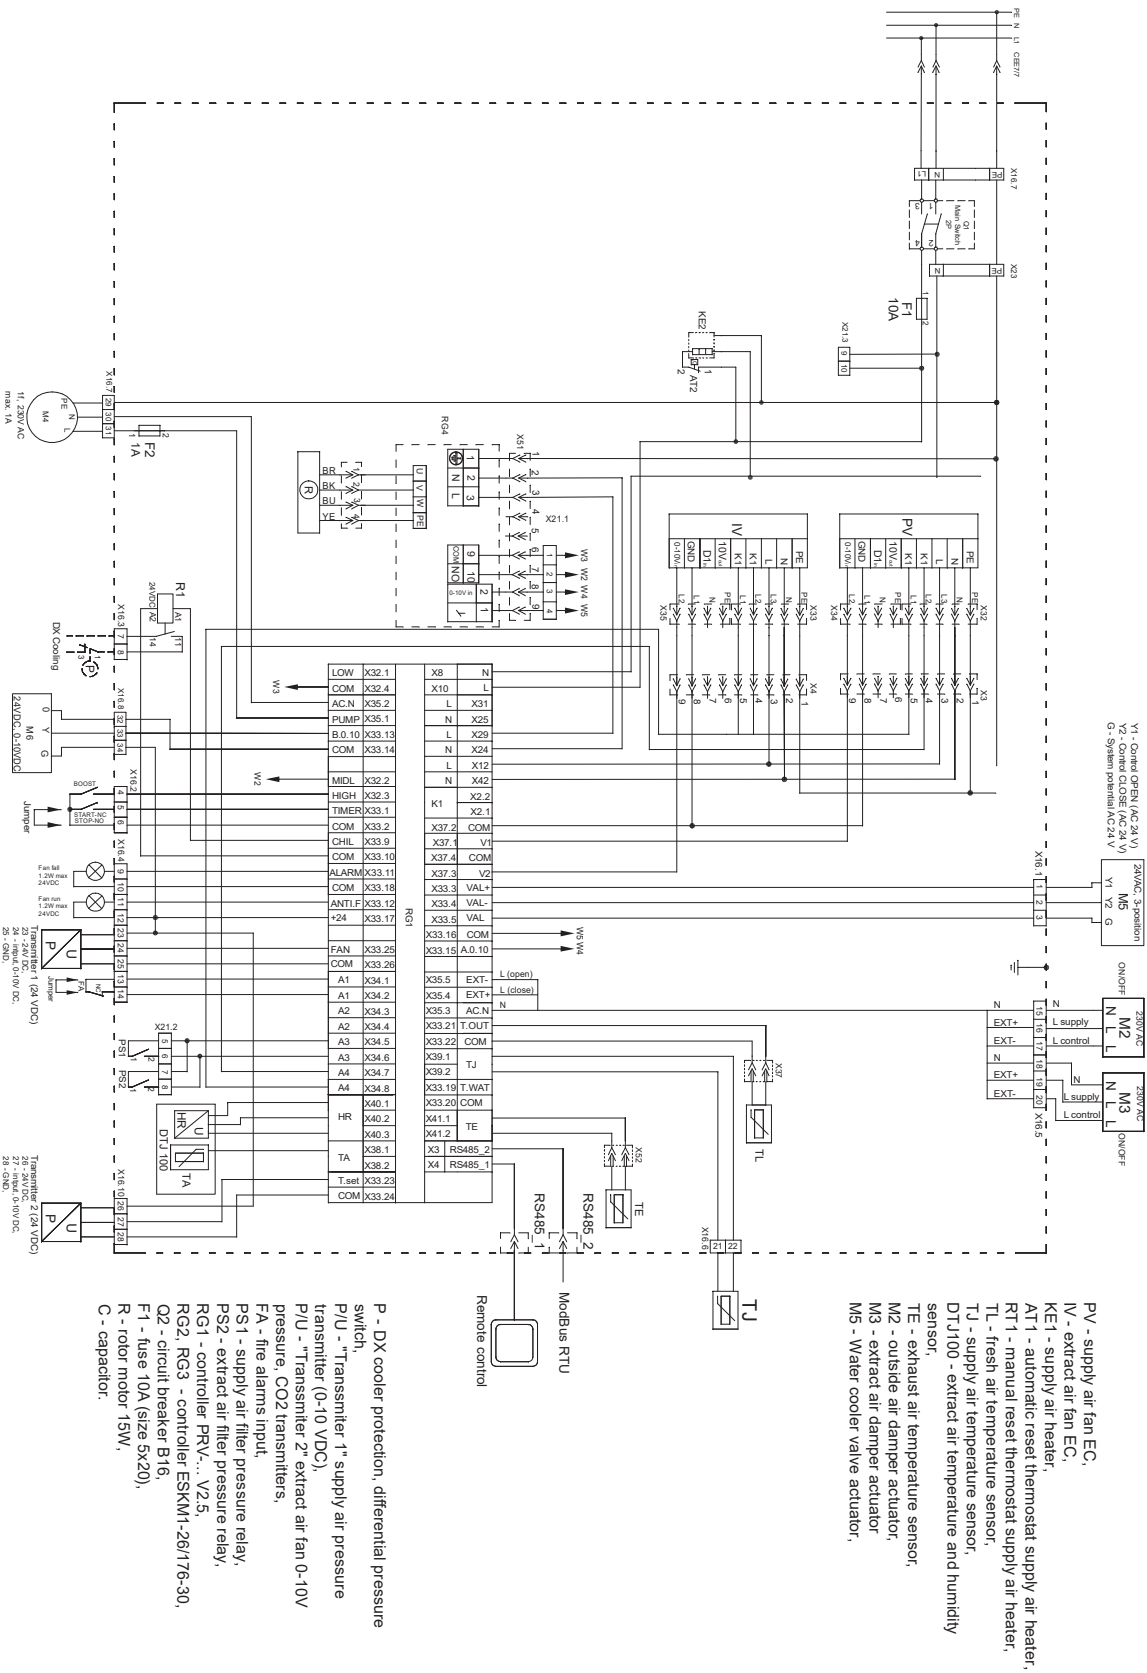


Figure 8.1.8.3. RIRS 1200-1900 HW EKO 3.0

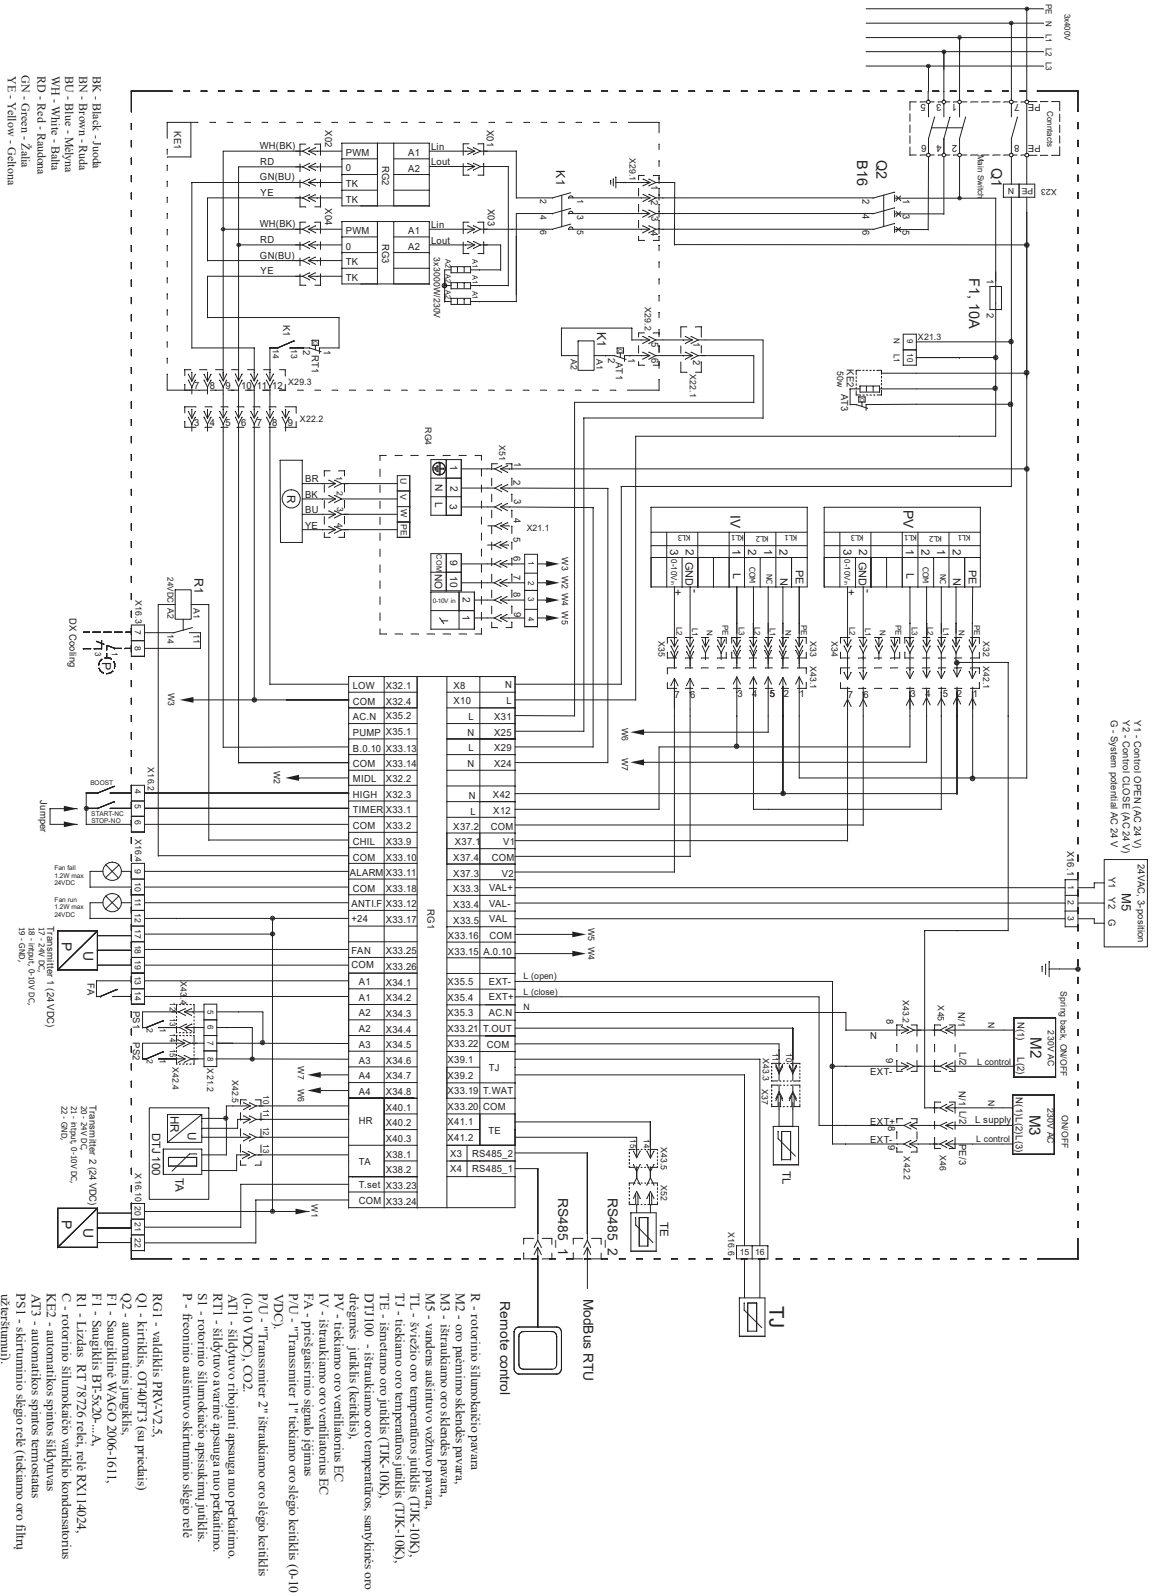


Figure 8.1.8.4. RIRS 2500 HE EKO 3.0

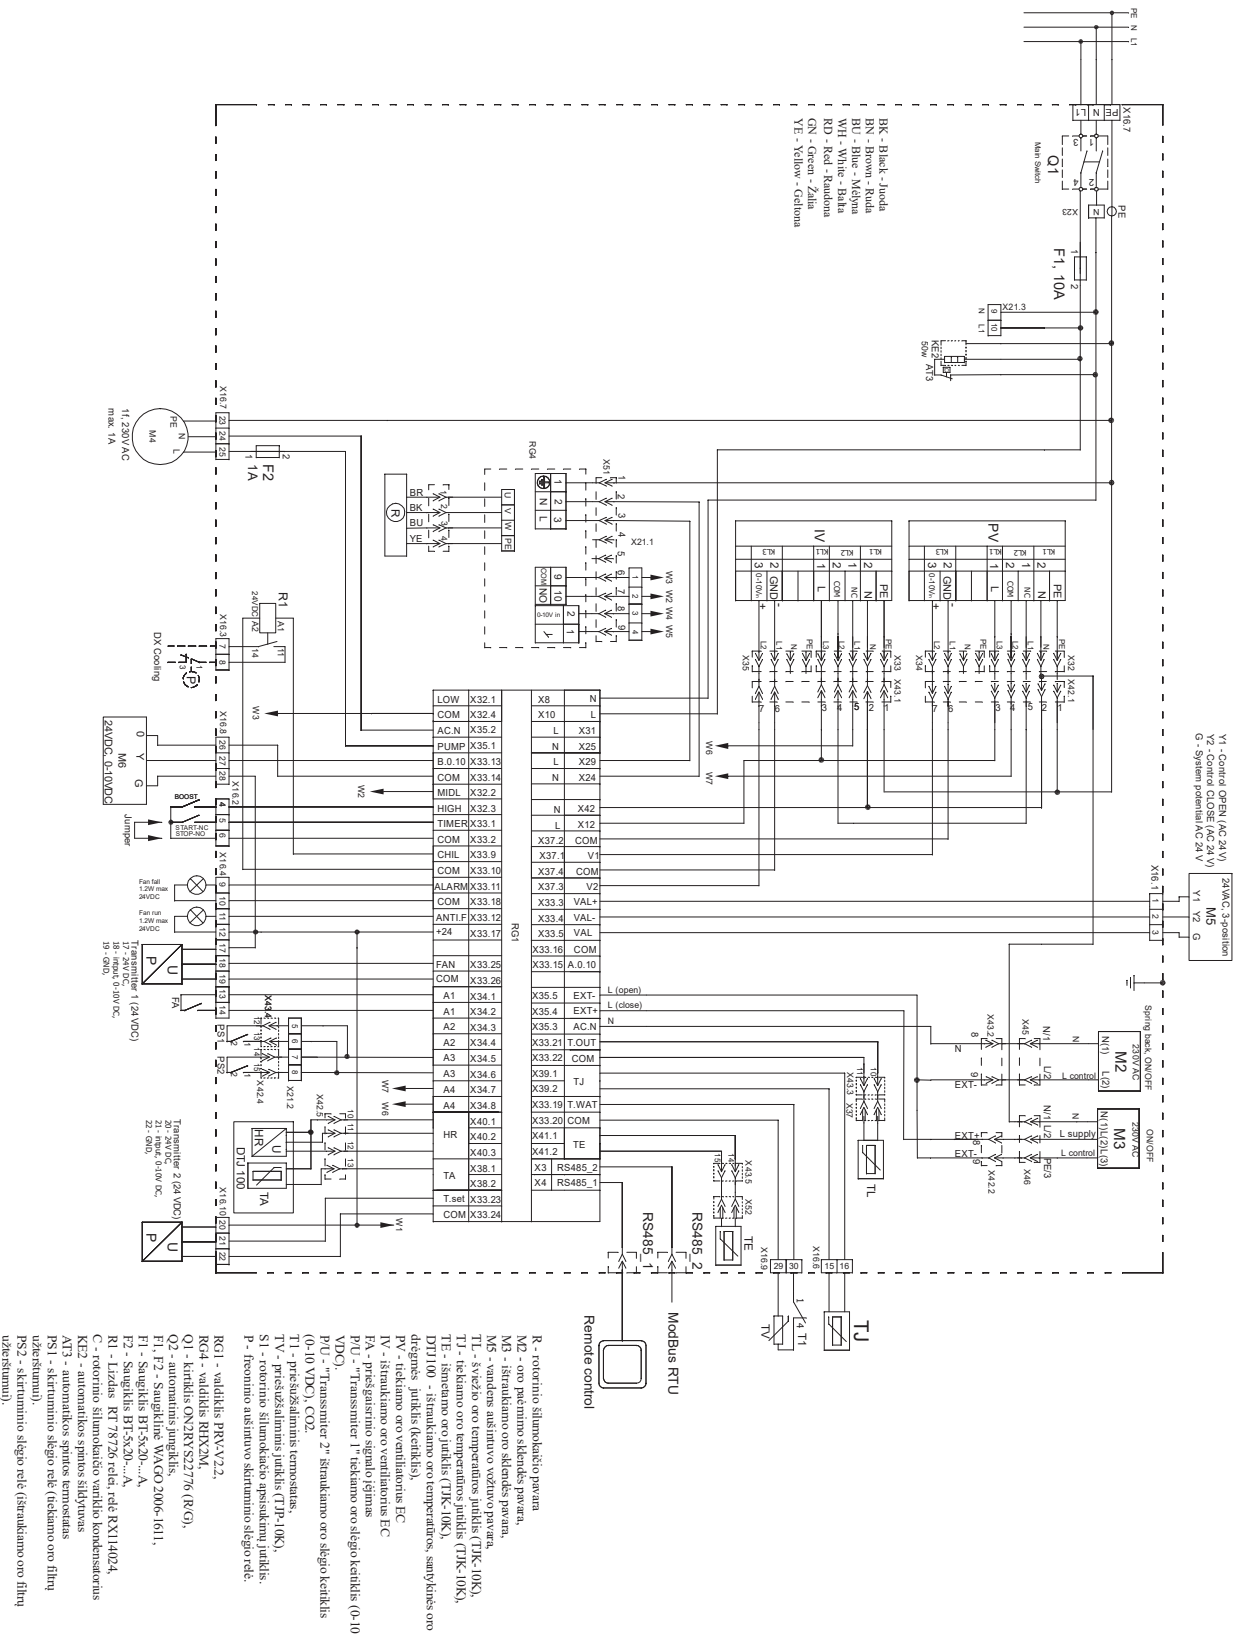


Figure 8.1.8.5. RIRS 2500 HW EKO 3.0

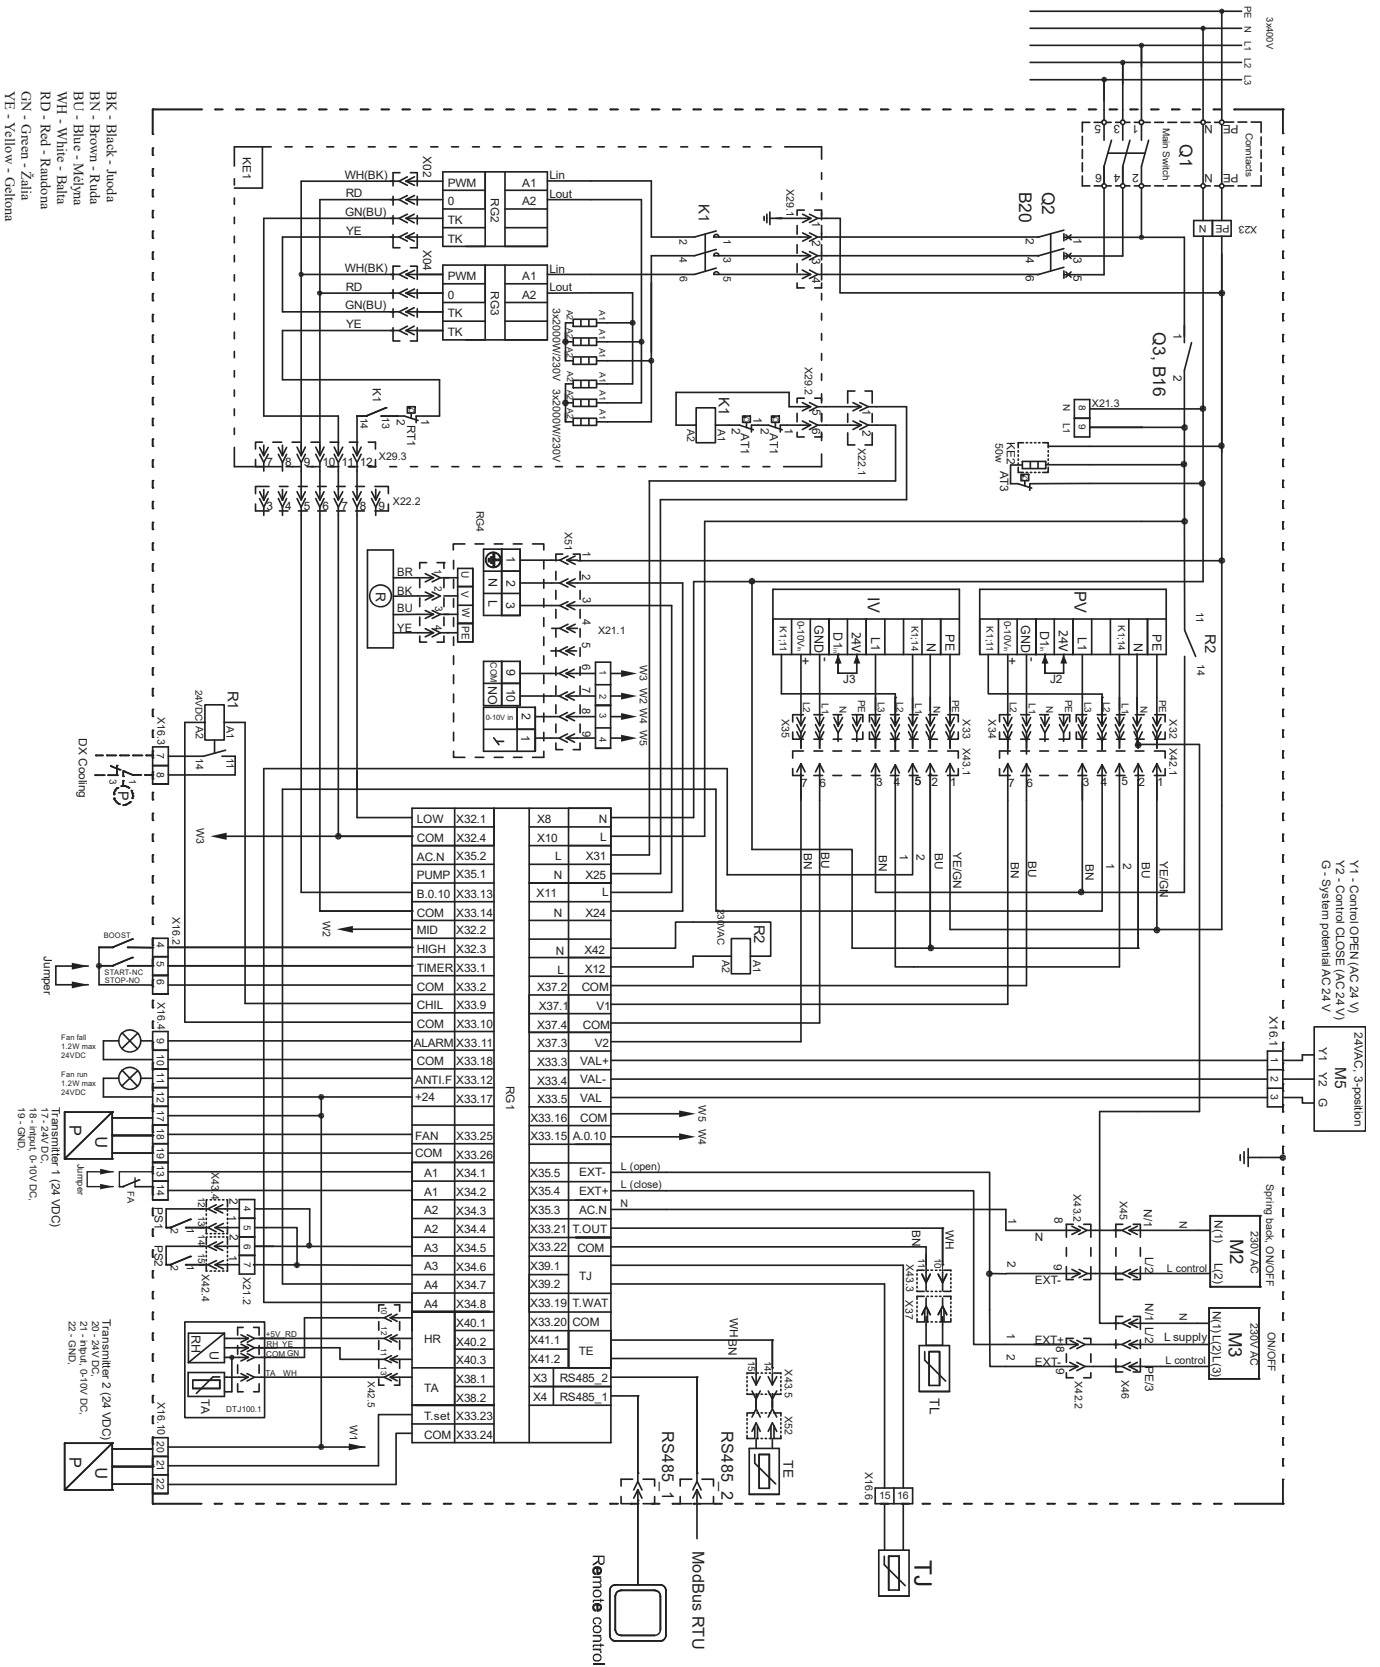


Figure 8.1.8.6. RIRS 3500 HE EKO 3.0


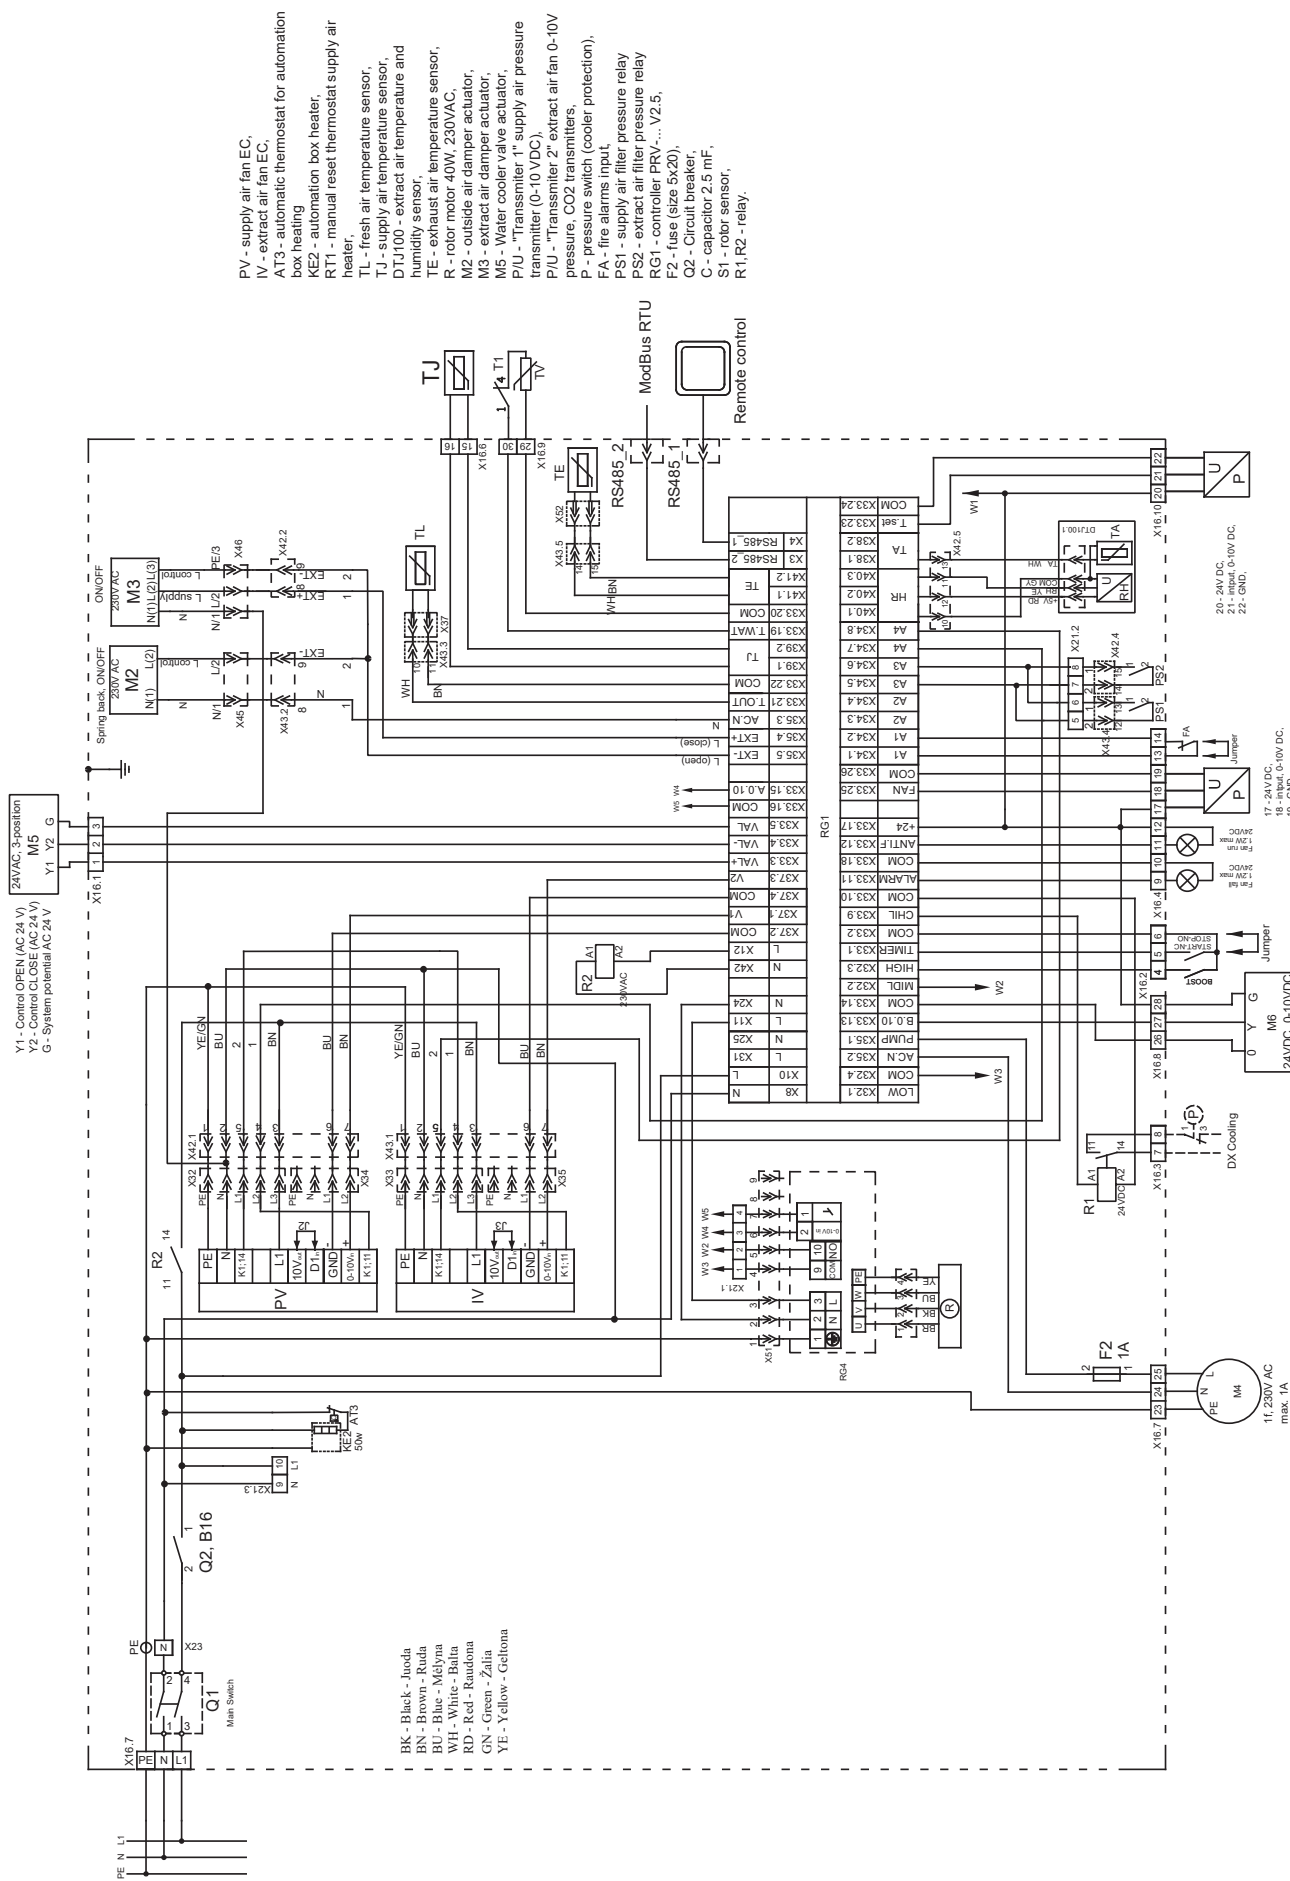



Figure 8.1.8.7. RIRS 3500 HW EKO 3.0

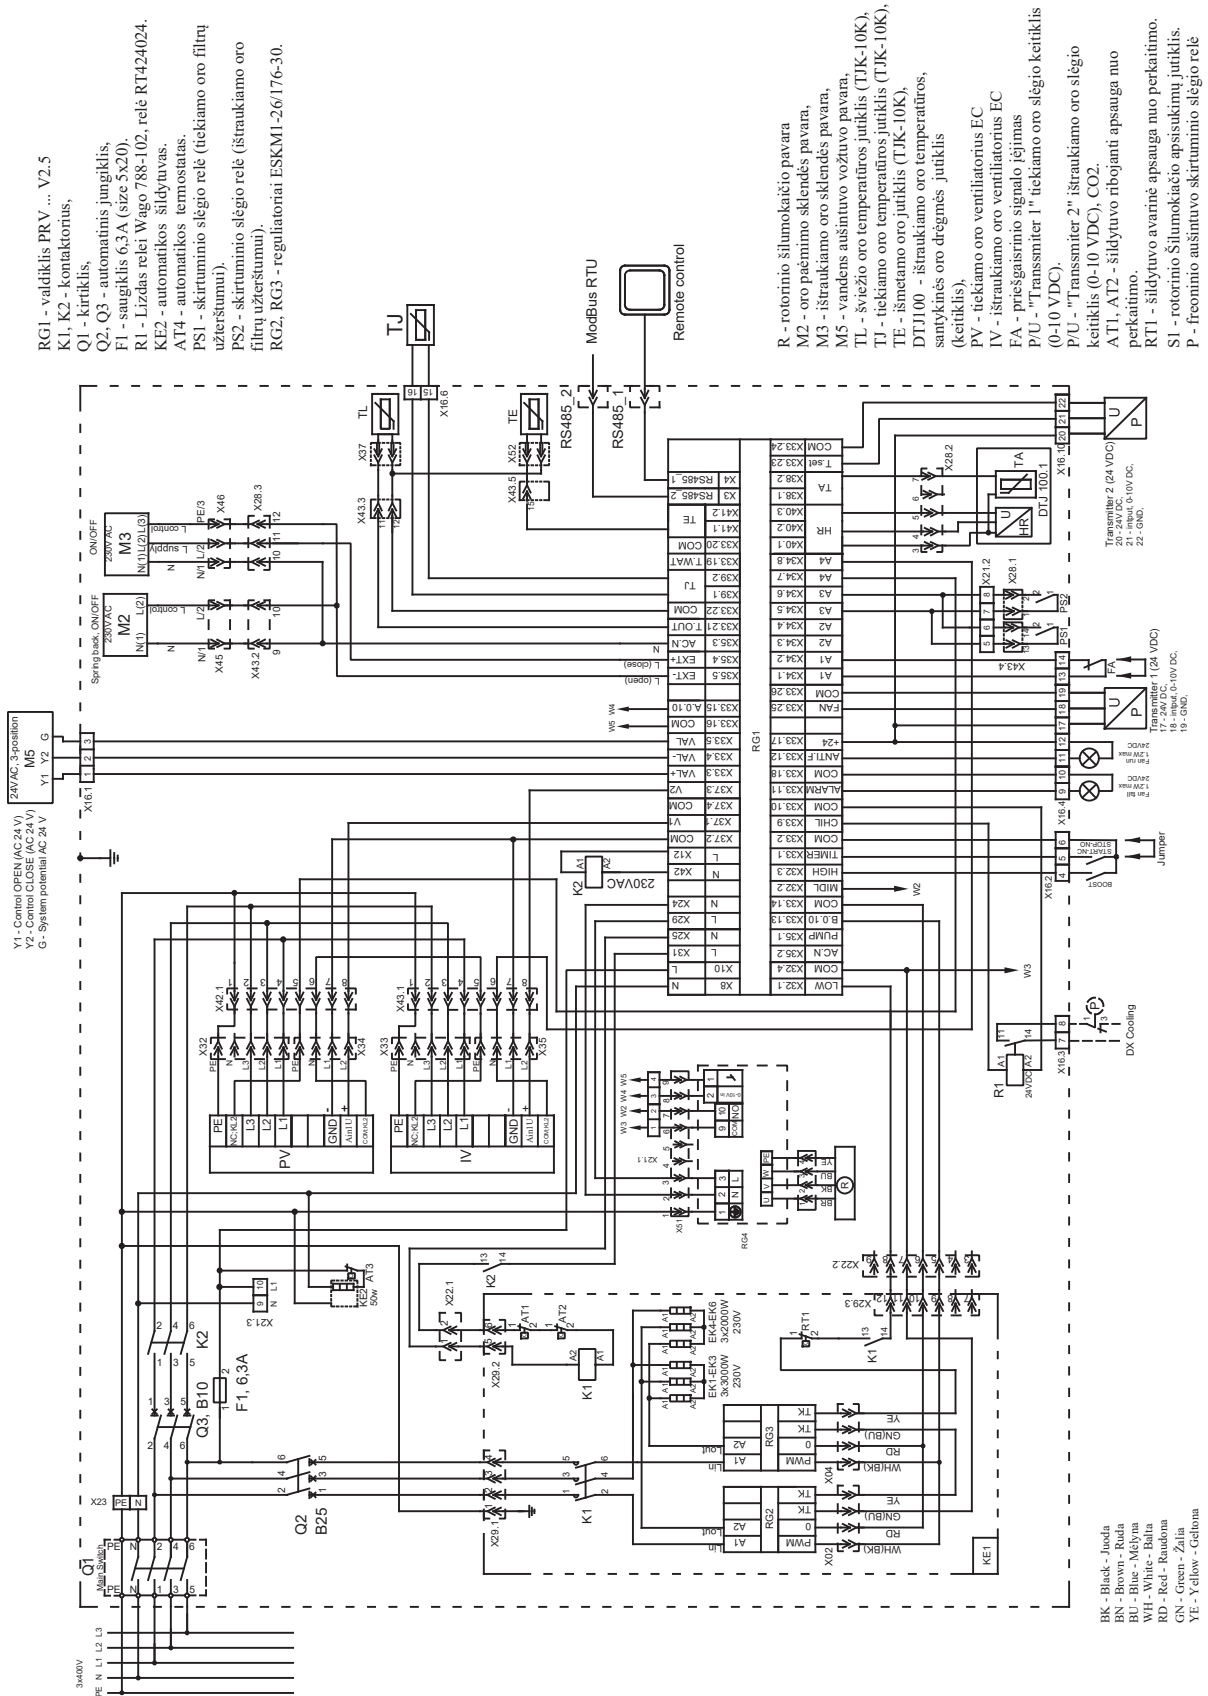

- RG1 - valdiklis PRV ... V2.5
- K1, K2 - kontaktorius,
- Q1 - kirtiklis,
- Q2, Q3 - automatinis jungiklis,
- F1 - saugiklis 6.3A (size 5x20),
- R1 - Lizdas relet Wago 788-102, rele RT424024,
- KE2 - automatikos šildyvas,
- AT4 - automatikos termostatas
- PS1 - skirtuminio slėgio relė (tikiamo oro filtrų užterštumui).
- PS2 - skirtuminio slėgio relė (ištraukiamo oro filtrų užterštumui).
- RG2, RG3 - regulatoriai ESKM1-26/176-30.

- R - rotorinio šilumokaičio pavara
- M2 - oro paimimo sklendės pavara,
- M3 - ištraukiamo oro sklendės pavara,
- M5 - vandens ausintuvo vožtuvo pavara,
- TL - šviežio oro temperatūros jutiklis (TJK-10K),
- T1 - tiekiamo oro temperatūros jutiklis (TJK-10K),
- TE - išmetamo oro temperatūros, santykinės oro drėgmės jutiklis (keitiklis),
- DT1100 - ištraukiamo oro temperatūros, santykinės oro drėgmės jutiklis (keitiklis),
- PV - tiekiamo oro ventiliatorius EC
- IV - ištraukiamo oro ventiliatorius EC
- FA - priešgaisrinio signalo įėjimas
- P/U - "Transmitter 1" tiekiamo oro slėgio keitiklis (0-10 VDC).
- P/U - "Transmitter 2" ištraukiamo oro slėgio keitiklis (0-10 VDC), CO2.
- AT1, AT2 - šildytuvo ribojanti apsauga nuo perkaitimo.
- RT1 - šildytuvo avarinė apsauga nuo perkaitimo.
- SI - rotorinio šilumokaičio apsisukimų jutiklis.
- P - freoninio ausintuvo skirtuminio slėgio relė

Figure 8.1.8.8. RIRS 5500 HE EKO 3.0

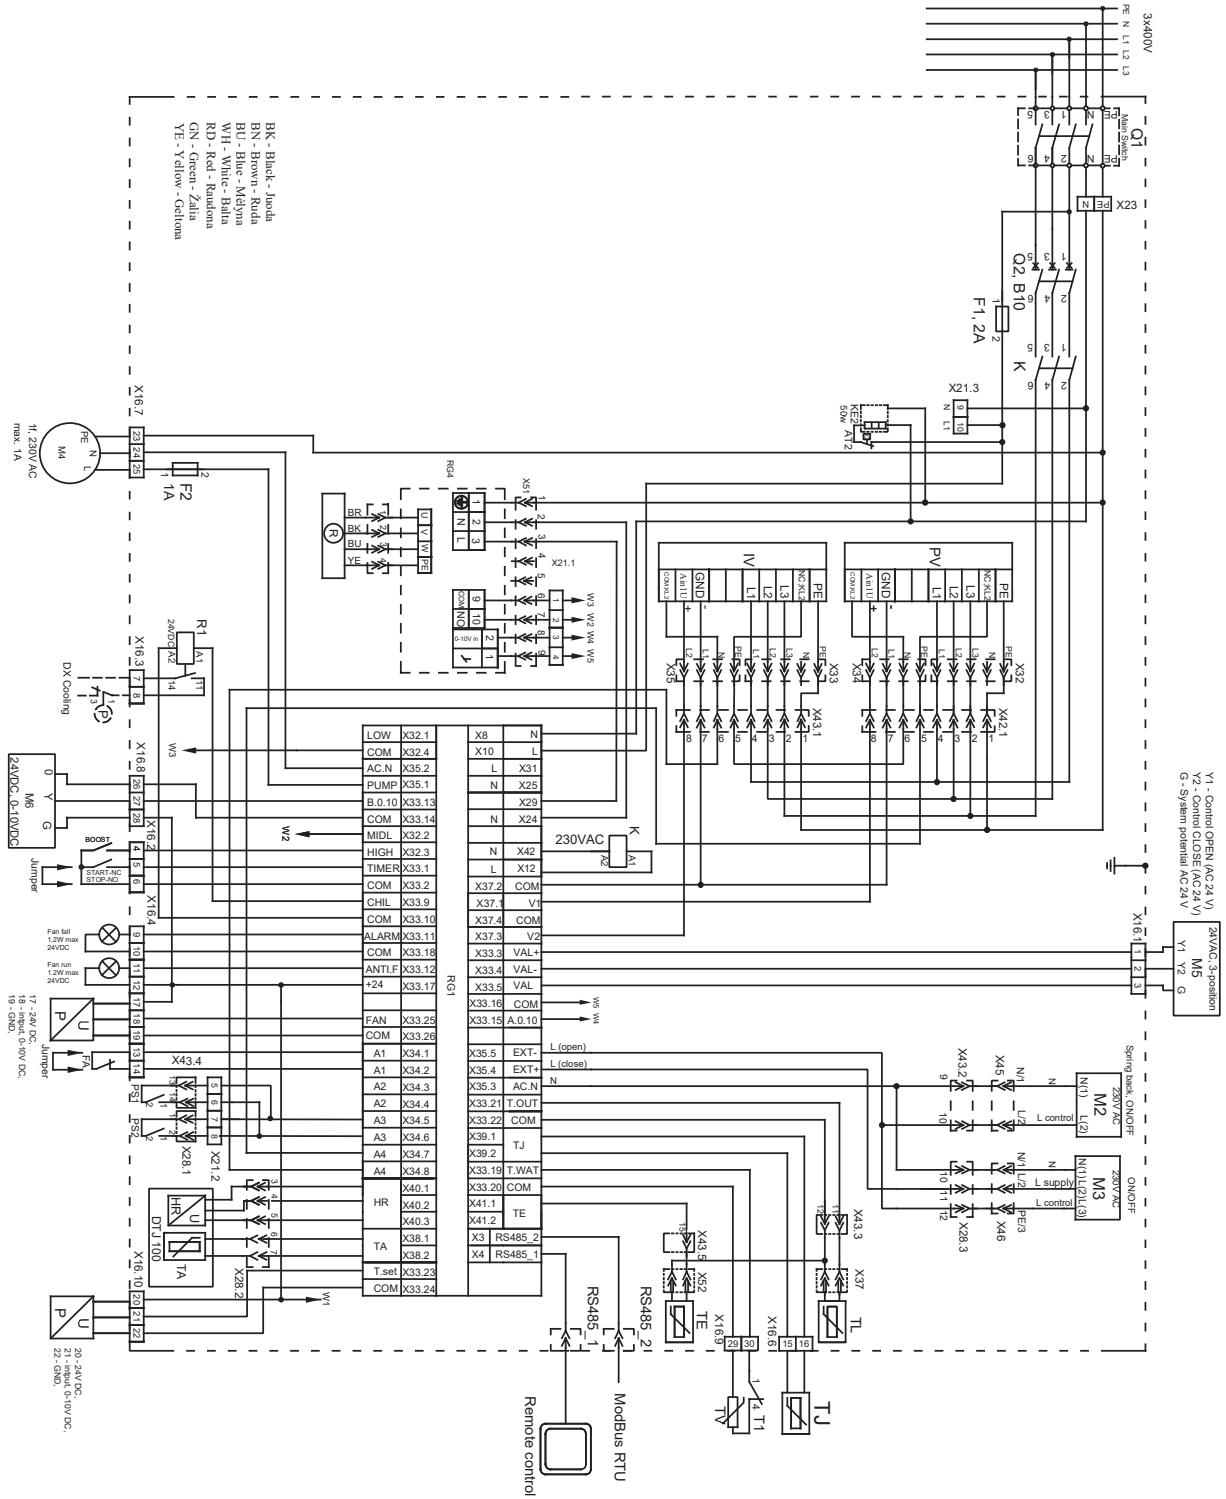

- PV - supply air fan EC.
- IV - extract air fan EC.
- TL - fresh air temperature sensor.
- TJ - supply air temperature sensor.
- DTJ100 - extract air humidity + temperature sensor.
- TE - exhaust air temperature sensor.
- SI - rotation sensor.
- M2 - outside air damper actuator.
- M3 - extract air damper actuator.
- M4 - water heater circulatory pump.
- M5 - water cooler valve actuator.
- M6 - water heater valve actuator.
- P - DX cooler protection, differential pressure switch.
- P/U - "Transmitter 1" supply air fan pressure (0-10 VDC) transmitter.
- P/U - "Transmitter 2" extract air fan (0-10V pressure or CO2 transmitters).
- FA - fire alarm input.
- PS1 - supply air filter pressure relay.
- PS2 - extract air filter pressure relay.
- R1 - relay.
- RG1 - PRV RWR 2.4 (R/R1, E/C3, W1, F3.00, AX, NC).
- F1, F2 - fuse (size 3X20).
- Q1 - main switch.
- Q2 - automatic circuit breaker.
- K - contactor.
- R - rotor motor.
- K12 - control box heater.
- A12 - automatic reset thermostat for control box heater.
- T1 - antifrost thermostat.
- TV - antifrost sensor.

Figure 8.1.8.9. RIRS 5500 HW EKO 3.0

9. POSSIBLE FAULTS AND TROUBLESHOOTING

FAILURE	CAUSE	EXPLANATION / CORRECTIVE ACTIONS
Unit is not operating	No supply voltage	Check whether the device is connected to the power network
	Protection device is off or a current leakage relay is active (if installed by the installer)	Switch on only if the unit condition has been evaluated by a qualified electrician. If the system failed, the failure MUST BE rectified prior to switching it on.
Air supply heater or pre-heater is not operating or malfunctioning (if installed)	Too low air flow in air ducts activates automatic protection	Check if air filters are not clogged Check if fans are rotating
	Manual protection is activated	Possible heater or unit failure. MUST contact the servicing staff for failure detection and its elimination.
Too low air flow at rated fan speed	Clogged supply and/or extract air filter(s)	Filter replacement needed
Filters are clogged and no message is shown on the remote control	Wrong time in filter timers or their switch is broken, or its pressure is set improperly.	Shorten filter timer time to the message of clogged filters or replace the pressure switch of the filters, or set their proper pressure.
Rotor is not rotating	Rotor belt is broken	Inspect the rotor belt. If it is broken then it should be changed or re-welded.
Rotor belt failure	Rotor belt is slipping	If belt is not broken, check its tightness and adjust, if necessary.

10.ECODESIGN DATA TABLE

RIRS EKO 3.0		1200 HE	1200 HW	1900 HE	1900 HW
Declared typology		bidirectional	bidirectional	bidirectional	bidirectional
Type of drive		Variable	Variable	Variable	Variable
Type of HRS		recuperative	recuperative	recuperative	recuperative
Thermal efficiency of heat recovery	[%]	83,9	83,9	84,3	84,3
Nominal NRVU flow rate	[m ³ /s]	0,33	0,33	0,42	0,42
Effective electric power input	[kW]	0,8	0,8	0,86	0,86
SFPint	[W/(m ³ /s)]	1100	1100	934	934
Face velocity	[m/s]	1,16	1,16	1,07	1,07
Normal external pressure	[Pa]	250	250	250	250
Internal pressure drop of ventilation components	[Pa]	241/193	241/193	222/189	222/189
Static efficiency of fans used in accordance with Regulation No 327/2011	[%]	37,8	37,8	46,9	46,9
Declared maximum external leakage	[%]	<1	<1	<1	<1
Declared maximum internal leakage	[%]	<3	<3	<3	<3
Energy classification of the filters		E	E	E	E
Description of visual filter warning		Pressure control	Pressure control	Pressure control	Pressure control
Casing sound power level (Lwa)	[dB(A)]	57	57	58	58
ErP Compliance		2018	2018	2018	2018
Internet address for disassembly instructions		www.salda.it			

RIRS EKO 3.0		2500 HE	2500 HW	3500 HE	3500 HW
Declared typology		bidirectional	bidirectional	bidirectional	bidirectional
Type of drive		Variable	Variable	Variable	Variable
Type of HRS		recuperative	recuperative	recuperative	recuperative
Thermal efficiency of heat recovery	[%]	84,1	84,1	79,6	79,6
Nominal NRVU flow rate	[m ³ /s]	0,74	0,74	0,99	0,99
Effective electric power input	[kW]	1,79	1,79	2,29	2,29
SFPint	[W/(m ³ /s)]	1111	1111	1137	1137
Face velocity	[m/s]	1,77	1,77	1,65	1,65
Normal external pressure	[Pa]	250	250	250	250
Internal pressure drop of ventilation components	[Pa]	244/187	244/187	283/208	283/208
Static efficiency of fans used in accordance with Regulation No 327/2011	[%]	35,6	35,6	39,5	39,5
Declared maximum external leakage	[%]	<1	<1	<1	<1
Declared maximum internal leakage	[%]	<3	<3	<3	<3
Energy classification of the filters		E	E	E	E
Description of visual filter warning		Pressure control	Pressure control	Pressure control	Pressure control
Casing sound power level (Lwa)	[dB(A)]	62	62	67	67
ErP Compliance		2018	2018	2018	2018
Internet address for disassembly instructions		www.salda.it			

RIRS EKO 3.0		5500 HE	5500 HW
Declared typology		bidirectional	bidirectional
Type of drive		Variable	Variable
Type of HRS		recuperative	recuperative
Thermal efficiency of heat recovery	[%]	76,4	76,4
Nominal NRVU flow rate	[m ³ /s]	1,69	1,69
Effective electric power input	[kW]	3,58	3,58
SFPint	[W/(m ³ /s)]	1061	1061
Face velocity	[m/s]	2,11	2,11
Normal external pressure	[Pa]	250	250
Internal pressure drop of ventilation components	[Pa]	353/282	353/282
Static efficiency of fans used in accordance with Regulation No 327/2011	[%]	65,2	65,2
Declared maximum external leakage	[%]	<1	<1
Declared maximum internal leakage	[%]	<3	<3
Energy classification of the filters		E	E
Description of visual filter warning		Pressure control	Pressure control
Casing sound power level (Lwa)	[dB(A)]	76,4	76,4
ErP Compliance		2018	2018
Internet address for disassembly instructions		www.salda.it	

11. DECLARATION OF CONFIRMITY

Manufacturer

SALDA, UAB
Ragainės g. 100
LT-78109 Šiauliai, Lithuania
Tel.: +370 41 540415
www.salda.lt

Hereby confirms that the following products - Air handling units:

RIRS * EKO 3.0

(where by „*“ indicates possible unit installation type and modification)

Provided it was delivered and installed in the facility in accordance with the included installation instructions, comply with all applicable requirements in the following directives:

Machinery Directive 2006/42/EC
EMC Directive 2014/30/EU
Low Voltage Directive 2014/35/EU
Ecodesign Directive 2009/125/EC
RoHS 2 Directive 2011/65/EU

The following regulations are applied in applicable parts:

Ecodesign requirements for ventilation units Nr. 1253/2014
Energy labeling of residential units Nr. 1254/2014

The following harmonized standards are applied in applicable parts:

EN 13141-7:2010 - Ventilation for buildings - Performance testing of components/products for residential ventilation - Part 7: Performance testing of a mechanical supply and exhaust ventilation units (including heat recovery) for mechanical ventilation systems intended for single family dwellings.

EN ISO 12100:2012 - Safety of machinery - General principles for design - Risk assessment and risk reduction.

EN 60204-1:2018 - Safety of machinery - Electrical equipment of machines - Part 1: General requirements.

EN 60335-1:2012 - Household and similar electrical appliances. Safety. Part 1: General requirements.

EN 60529:1999/A2:2014/AC:2019 - Degrees of protection provided by enclosures (IP code).

EN IEC 61000-6-1:2019-03 - Electromagnetic compatibility (EMC) -- Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments.

LST EN 61000-6-3:2008 - Electromagnetic compatibility (EMC) -- Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments.

Should any alterations be made in the products, this declaration will no longer apply.

Quality: SALDA UAB activities are in line with the international quality management system standard **ISO 9001:2015**.

Date 2020-10-23



Giedrius Taujenis
 Director product development

12. WARRANTY

1. All equipment manufactured in our factory is checked in operating conditions and tested before delivery. Test protocol is supplied together with the unit. The equipment is shipped in good working condition to the end-client. The unit is warranted for the period of two years from the invoice date.
2. If equipment is found to have been damaged during transportation, a claim should be made against carrier, as we assume no responsibility for such damage.
3. This warranty does not apply:
 - 3.1. when transportation, storage, installation and maintenance instructions of the unit are violated;
 - 3.2. when the equipment is improperly maintained, mounted - inadequate maintenance;
 - 3.3. when the equipment without our knowledge and permission has been upgraded or unskilled repairs were made;
 - 3.4. when the unit was used not for its original purpose.
 - 3.5. Company SALDA UAB is not responsible for potential loss of property or personal injury in cases where AHU is manufactured without a control system and the control system will be installed by the client or third parties. The manufacturer's warranty does not cover devices that will be damaged by installing the control system.
4. This warranty does not apply at these malfunction cases:
 - 4.1. mechanical damage;
 - 4.2. damage caused by entering outside objects, materials, liquids;
 - 4.3. damage caused by natural disaster, accident (voltage change in the electricity network, lightning, etc..).
5. The company assumes no liability for its products either directly or indirectly damage, if the damage is caused by failure to comply with installation and mounting regulations, deliberate or careless users or third-party behavior.

These conditions are readily discernable when the equipment is returned to our factory for inspection. If the direct client determines that equipment is found to be faulty, or a breakdown occurred, he should inform the manufacturer within five working days and deliver the equipment to manufacturer. Delivery costs should be covered by customer.



Manufacturer reserves the right to change this technical passport any time without prior notice, if some typographic errors or inaccurate information is found, as well as after improving the apps and/or the devices. Such changes will be included in the new issues of the technical passport. All illustrations are just for information and thus may differ from the original device.

12.1. LIMITED WARRANTY COUPON

Warranty term
24 months*

I received complete package and technical manual of the product ready for usage. I have read warranty terms and conditions and agree with them:

.....
 Customer's signature

*refer to WARRANTY CONDITIONS

Dear User, we appreciate your choice and do hereby guarantee that all ventilation equipment manufactured by our Company is inspected and thoroughly tested. An operational and high-quality product is sold to the direct buyer and shipped from the territory of the factory. It is provided with a 24-month warranty since invoice issue date.

Your opinion is important to us, thus we always look forward to hearing your comments, feedback, or suggestions regarding technical and operational characteristics of the Products.

In order to avoid any misunderstandings, please read the instructions for installation and operation of the product as well as other technical documents of the product carefully. The number of the Limited Warranty Coupon and serial number of the product specified on the silver identification sticker attached to the housing must match.

The Limited Warranty Coupon shall be valid provided that the seller's stamps and records are clear. It is not allowed to change, delete, or rewrite the data specified on it in any manner – such a coupon shall be invalid.

With this Limited Warranty Coupon the manufacturer confirms one's obligations to implement the imperative requirements established by effective laws on protection of consumer rights in the event of identification of any defects of the products.

The manufacturer reserves the right to refuse provision of free warranty servicing in cases when the warranty conditions listed below are disregarded.

A series of horizontal lines for writing, arranged in approximately 25 rows across the page.

PRODUCT MAINTENANCE TABLE

Product name*		
SERIAL number*		
installation	interval	Date
Fan cleaning	Once per year**	_____
Heat-exchanger cleaning	Once per year**	_____
Filter replacement	Every 3-4 months**	_____

* - Look at the product label.

** - At least.

NOTE. The customer shall be required to complete the Product Maintenance Table.

MANUALS IN OTHER LANGUAGES

DE



<https://select.salda.lt/file/rirs1200-5500hekocode>

DK



<https://select.salda.lt/file/rirs1200-5500hekodk>

FR



<https://select.salda.lt/file/rirs1200-5500hekofr>

LT



<https://select.salda.lt/file/rirs1200-5500hekolt>

PL



<https://select.salda.lt/file/rirs1200-5500hekopl>

RU



<https://select.salda.lt/file/rirs1200-5500hekoru>



MAN000346

