



# CWP-M 06 A1

1-When connecting with Multi-function tank, just connect the 6-core and 2-core connectors with Multi-function tank.  
 2-When connecting with other indoor unit, please remove the 6-core and 2-core cables from the terminals. The terminals can be used for connection of the components from the indoor unit.