



## Mounting plates for servomotor type MP

Mounting plates for mounting a Belimo actuators on a circular control valve

- **MP-LM** for mounting actuators of type LM...A
- **MP-NM** for mounting actuators of type NM...A
- **MP-LF** for mounting actuators of type LF
- **MP-NF/SF** for mounting actuators of type NF...A or SF...A

### Order example

- **MP, LM**

Explanation :

**MP** = Type of mounting plate

**LM** = Type of Belimo-motor used

