


**KIT FT SC**

- Accessories for fire dampers
- Spare fusible link
- For SC dampers

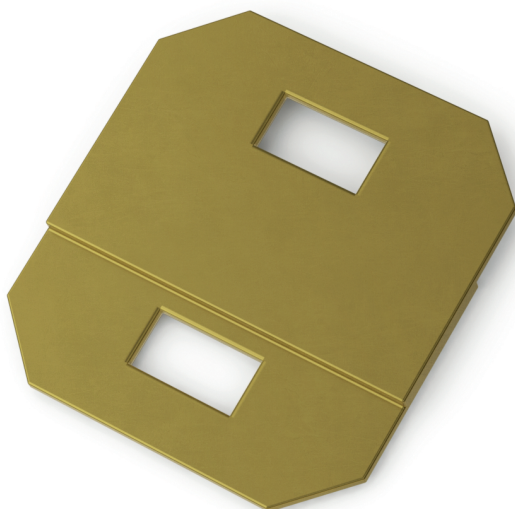

## Fusible link for SC(+) type KIT FT SC

The circular fire damper cartridge SC(+) is held in open position by the fusible link. When the temperature in the duct rises above 72°C, the fusible link **FT SC** melts and the fire damper closes.

### Mounting

- See drawing

### Order example

- **KIT FT SC 72**


Explanation

**KIT FT SC 72** = Fusible link 72°C for SC(+)

### Specifications

- Reactietemperatuur smeltlood : 72°C
- Maintenance : Maintenance free

### Mounting

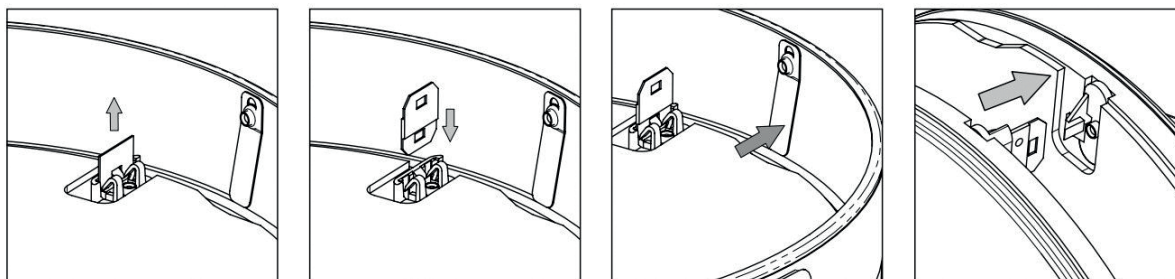

1. Remove the melted fusible link. Press the lever slightly.
2. Place the new fusible link in the lever.
3. Press the two leaf springs to unlatch the damper blades.
4. Click the fusible link into the other holder to rearm the damper blades in open position.