



**J.01** 

Air to Water Heat Pumps

COD

R-AQUA Accessories

## Coding plugs type COD

R-AQUA's CGW range of air/water heat pumps are suited for heating and cooling as a standard.

In certain cases, it is necessary to permanently disable the cooling function to qualify for a premium. The purchase and installation of the coding plug (heating only) permanently disables the cooling function on the unit.

## **Brand**

R-AQUA

## **Application**

Permanent deactivation of the cooling function

## Installation

- 1. Turn off the power supply to the heat pump.
  2. Remove the blue coding plug from the circuit board.
  3. Insert the heating-only coding plug into the unit.
  4. Turn power back on to the heat pump.

- 5. The unit is now operable in heating only mode.

Technical data	
Type of heat pump	Coding plug heating only
CGW-IU XX A1	COD-IU-H
CGW-IU XX M1	
CGW-ID XX A1	COD-ID-H
CGW-ID XX M1	
CGW-M XX A1	COD-M-H
CGW-M XX M1	
CGW-M SG XX A1	COD-M-H
CGW-M SG XX M1	