 


The LCD display panel features a top row of icons: a triangle, a snowflake, a water drop, a fan, a sun, a moon with stars, a house with a star, a house with 'AT', a Christmas tree, a house, a house with 'ID', and a Wi-Fi symbol. Below these icons, the display is divided into sections. On the left, there are icons for 'AUTO' (sun) and 'TURBO' (fan), with a fan speed indicator below them. The center shows a large digital display '888' with '°C' above and '°F' below. On the right, another digital display shows '888' with 'ON/OFF' and 'HOUR' below it. At the bottom of the display, there are several function buttons: 'X-FAN', 'E-HEATER OFF', 'MEMORY', 'CLEAN', 'SAVE', 'DEFROST', and 'SHIELD', each with a small icon to its left.



SWING/ENTER



TIMER



MODE



FUNCTION



FAN



ON/OFF