



EX IN2

EX IN1

EX OUT2

EX OUT1

FGL PbF

VOL
NON VOL
L310

Edge
Pulse
12V
5V

FUNCTION SETTING

FCT

1 2 3 4 5 6 7 8 9 A B C D
10 11 12

ICT

K14YM-01-01 EDITION. 01
K14YM-SC-A (01-01) V-0
9710242014 PPK-3A SWF

CN309
FLASH

R379
R372
R371
R370
R369
R368
R363

SW301
PC311

SW302

SW303

PC310

IC310

IC311

PC314
PC313
PC312

IC312
IC313
IC314
IC315
IC316
IC317
IC318

PC318
PC317
PC316
PC315
PC314
PC313
PC312

IC319
IC320
IC321
IC322
IC323
IC324
IC325
IC326
IC327
IC328
IC329
IC330
IC331
IC332
IC333
IC334
IC335
IC336
IC337
IC338
IC339
IC340

IC341
IC342
IC343
IC344
IC345
IC346
IC347
IC348
IC349
IC350
IC351
IC352
IC353
IC354
IC355
IC356
IC357
IC358
IC359
IC360

PC320
PC319
PC318
PC317
PC316
PC315
PC314
PC313
PC312
PC311
PC310

IC361
IC362
IC363
IC364
IC365
IC366
IC367
IC368
IC369
IC370
IC371
IC372
IC373
IC374
IC375
IC376
IC377
IC378
IC379
IC380

IC381
IC382
IC383
IC384
IC385
IC386
IC387
IC388
IC389
IC390
IC391
IC392
IC393
IC394
IC395
IC396
IC397
IC398
IC399
IC400

MAIN COM.

GND

C