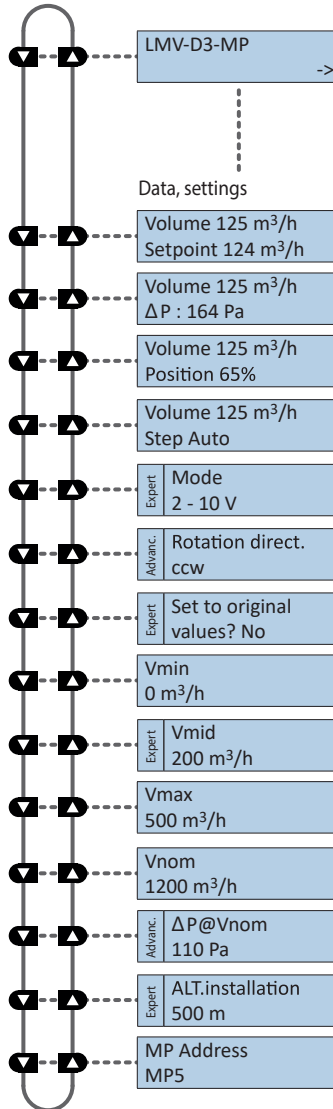


1) For Modbus settings, see previous description of „Basic functions for Modbus actuators“

2) With defined Vnom the volume is displayed in m³/h. With non-defined Vnom the volume is displayed in %.Adjustment/display options
LMV-D3-MP.

Possible settings with in editing mode:

Auto / OPEN / CLOSE / Min / Mid / Max /
Stop

2 - 10 V / 0 - 10 V (only with MF/MP types)

ccw / cw

No / Yes

0...Vmax

Vmin...Vmax

Vmin...Vnom, minimum 20% of Vnom

0 ... 3000 m

PP, MP1...MP8
(on MF types only PP)