


5. Place the Header horizontally so that the refrigerant separates evenly. They cannot be used vertically.

Gas pipe


Horizontal



OK

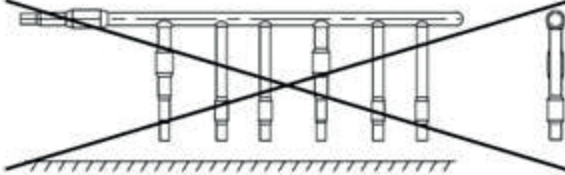

PROHIBITED

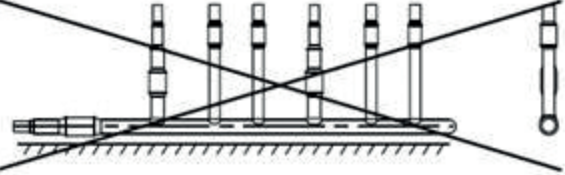


PROHIBITED

Liquid pipe


Horizontal



OK

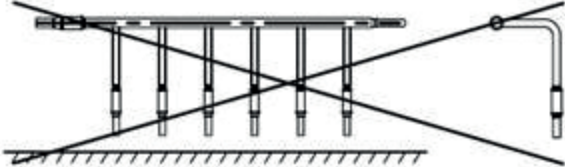

PROHIBITED

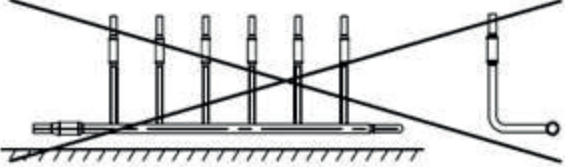

PROHIBITED